

Brake Light pro

Installation and Operation Manual

Model **BLP-U02** v2

For use on BMW motorcycles with LED rear brake light

1. Foreword

Congratulations on your purchase of a HealTech Brake Light Pro programmable brake light flasher module. This product will fit all BMW motorcycles which have a 2-wire LED rear brake light assembly. The unit will not interfere with the bulb monitoring feature, it will continue to work as intended.

The BLP module is the next generation of brake light flashers with features not found in competing products – touch sensor for easy programming and maximum reliability, high power FET with short circuit protection, and extremely small size for trouble free fitment in tight spaces.

Rear end collisions are the most common type of road accident. Motorcycle Safety Foundation (MSF) and training literature suggest that you pump your brakes (flash your brake lights) for improved visibility at the start of deceleration. The use of this device will increase safety, especially on motorcycles. On cars, we recommend flashing the 3rd brake light only. Premium cars with flashing brake lights are being introduced on more and more markets.

Warning: Check local vehicle statutes to see if brake light flashers are allowed in your country/state, since the Brake Light Pro can save lives but can be illegal in some countries. If the use of brake light flashers is restricted in your country or state, we recommend setting the unit to mode “1” which simulates manual flashing of the brake light (3 slow flashes). You are responsible to comply with the laws of your region. E.g. California Vehicle Code 25250 allows a maximum of four flashes within four seconds. Mode “1” complies with this regulation.

2. Specifications

Dimensions:

30 x 20 x 13 mm (1.18 x 0.78 x 0.51 inches)

Voltage range:

6V to 20V

Maximum load:

120W

Operating temp:

-40C to +80C (-40F to +176F)


Light patterns:

11 modes + bypass mode


3. Installation

Disclaimer: Be sure to follow the install steps properly. Wrong connections may damage the module and void the warranty.

1. Overview of the connections:

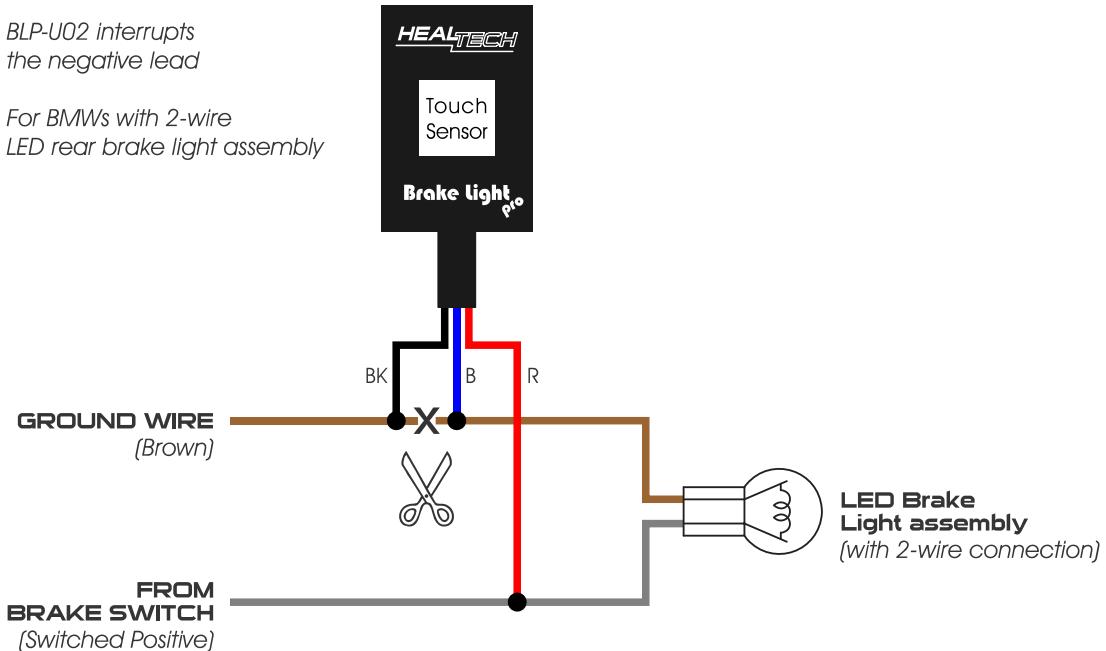

2. Find and **disconnect** the rear brake light assembly connector then proceed as shown on this photo:

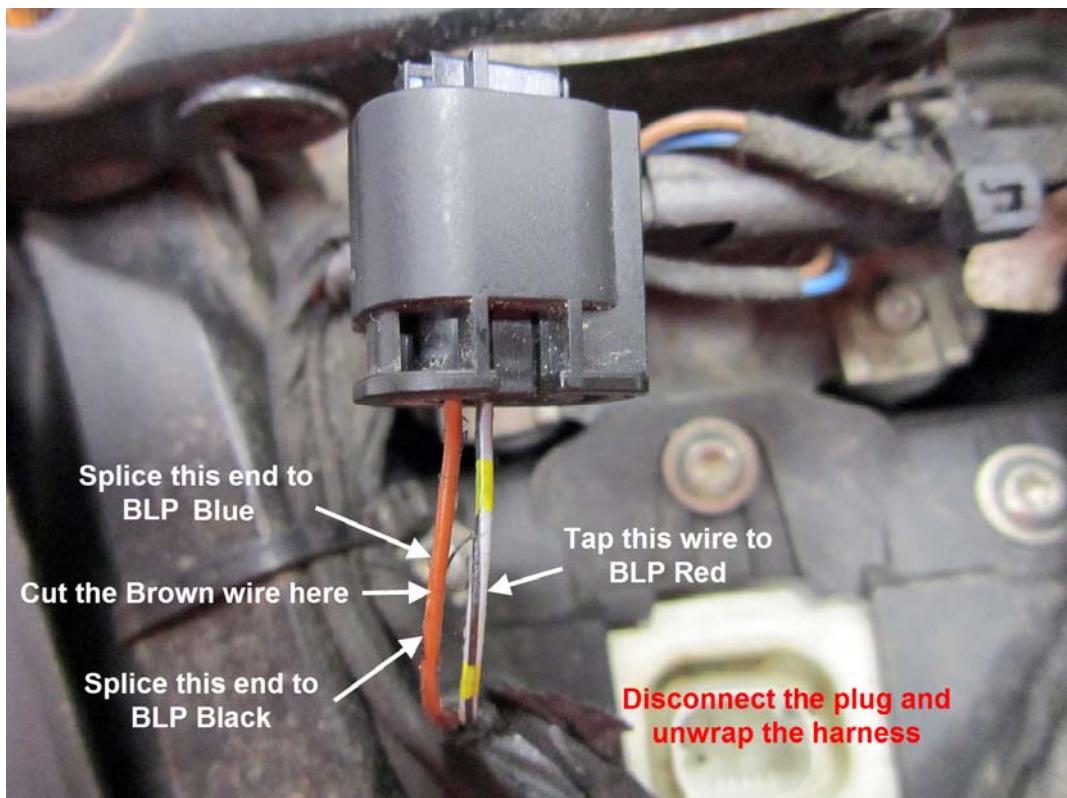

To make the 3 splices, use the supplied red quick connectors. Do NOT strip the wires when using the red connectors.

Usage: Place one bike wire inside run channel. Close side cover until latched. Insert unstripped BLP wire completely and check its position. Insert the blade (u-contact) and press down by finger pressure. Then, depress the u-contact with pliers. Close hinged top cover until latched. Remove the excess gel around the connector with dry cloth.

3. Turn the ignition ON and **Test** the Brake light operation. The light should flash for a few seconds.
4. Peel off the green plastic from the back of the unit, and mount it such a way that you can reach the top side of the box with your fingers. Secure the wires with the cable ties supplied.

4. Operation

The unit is fully functional after installation. If you wish, you can change the flashing mode easily with a few taps on the module.

Here's the list of available modes:

Mode #	Frequency [Hz]	Duration (s)	Total flashes
0 (bypass mode)	0	-	0
1	1.5	2	3
2	1.5	5	8
3	3	2	6
4	3	5	15
5	6	2	12
6	6	5	30
7	9	2	18
8	9	5	45
9	12	2	24
10	12	5	60
11 (deceleration warning signal)	sweeps from high to low frequency	3	8

Notes:

- In bypass mode, the brake light works the same way as without the module installed.
- Modes 1 to 10 start with a 1 second pulse, which ensures the brake light reaches the maximum brightness within the shortest time. Then it flashes the light with 75% duty cycle (75% ON, 25% OFF) for best visibility (flashing light without loss of brightness).

- In modes 1 to 11, when the flashing cycle ends, the brake light remains ON as long as you apply the brake.
- Modes 7 to 10 are suited for LED lights only as bulbs can not follow the flashing speed of these modes.
- The setting is stored in flash memory, no need to re-program the device if you disconnected the battery.

To change the flashing mode:

- Have the ignition key in ON position, then **apply and hold the brake**, so the brake light turns ON.
- **Wait until the flashing cycle ends** and the brake light remains steady. Do not release the brake at this point, hold until the programming is complete.
- **Touch and hold** the sensor for about 5 seconds, **until the brake light turns OFF**. This confirms you are in programming mode.
Note: to avoid unintentional programming, you must touch and hold the sensor about 2-4 seconds AFTER the flashing cycle ends and the light is steady. If you miss this programming window, you need to release the brake and start over.
- **Release the sensor.** The light comes ON and remains ON. This means mode "0" is selected. If you wish to leave the module in bypass mode, release the brake and the setting is stored.
- To select the next mode, **touch and hold** the sensor, **until the light turns OFF**. When you **release the sensor**, the **next mode is selected** and you see the flashing light pattern for that mode.
- When the desired mode is selected, **release the brake** and the setting is stored.

5. Warranty

The BLP module is built to last with HealTech's industry leading build quality: all leads are protected against short circuits and high energy transients. Only high quality components have been used, and the epoxy layer construction gives extreme protection for the internal parts from shocks, vibrations and water.

To ensure trouble-free operation from the start, all units have been extensively tested prior to shipment. For this reason, please make sure you followed the install steps properly and check the connections before you report a problem.

Our dealers are offering a 30-day money-back guarantee on HealTech products if the product does not fulfill your expectations. (*All parts must be returned in original condition for full refund.*)

Furthermore the product is covered by our 2-year replacement warranty from the date of purchase.

Web: **www.healtech-electronics.com**

Email: **support@healtech-electronics.com**