# FOR OFF ROAD/RACE USE ONLY!

## Part#:DHFCB-AP/BM/DU-XX/DHFC (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

## NOTE: These instructions apply to DHFCB-AP, DHFCB-BM, DHFCB-DU(01&02)

1. Make sure you have all of the required parts for installation. (see checklist below)

- 2. Remove stock (OEM) fuel cap.
- 3. On all bikes listed above you will be re-using the OEM vent system. The Halo Base will only replace the aluminum ring. (see back page)\*
- 4. Make sure both base and cap gaskets are installed.

5. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

#### TOOLS REQUIRED

## PARTS CHECKLIST

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

#### TORQUE SPECS AND INFO

All Hardware: 6FT/LB

## Halo Cap

- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)



## THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN\*

# FOR OFF ROAD/RACE USE ONLY!

## Part#:DHFCB-AP/BM/DU-XX/DHFC (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

## NOTE: These instructions apply to DHFCB-AP, DHFCB-BM, DHFCB-DU(01&02)

- 1. Make sure you have all of the required parts for installation. (see checklist below)
- 2. Remove stock (OEM) fuel cap.

3. On all bikes listed above you will be re-using the OEM vent system. The Halo Base will only replace the aluminum ring. (see back page)\*

4. Make sure both base and cap gaskets are installed.

5. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

### TOOLS REQUIRED

### 4mm Hex Key

3mm Hex Key (Honda)
Blue (#242) Loctite

### TORQUE SPECS AND INFO

All Hardware: 6FT/LB

## PARTS CHECKLIST


- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)




## THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN\*

## DRIVEN PERFORMANCE PRODUCTS WWW.DRIVENRACING.COM 866-5-DRIVEN

DRIVEN PERFORMANCE PRODUCTS WWW.DRIVENRACING.COM 866-5-DRIVEN

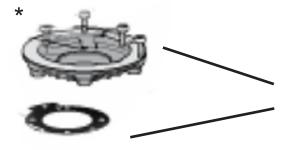

must be reused with the Halo fuel cap

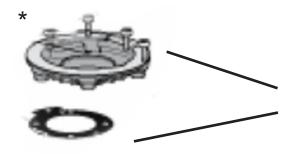

must be reused with the Halo fuel cap