

**FOR OFF ROAD/RACE USE ONLY!**



**Part#:DHFCB-TR(01)-XX/DHFC (DRIVEN HALO FUEL BASE/CAP)  
INSTALLATION INSTRUCTIONS**

**DRIVEN PERFORMANCE PRODUCTS  
WWW.DRIVENRACING.COM  
866-5-DRIVEN**

**NOTE: These instructions apply to DFCHB-TR(01)**

1. Make sure you have all of the required parts for installation. (see checklist below)
  2. Remove stock (OEM) fuel cap.
  3. Make sure both base and cap gaskets are installed. \*Can be used with OEM dish gasket.
  4. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws.
- Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

**TOOLS REQUIRED**


- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

**TORQUE SPECS AND INFO**

- All Hardware: 6FT/LB

**PARTS CHECKLIST**

- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)

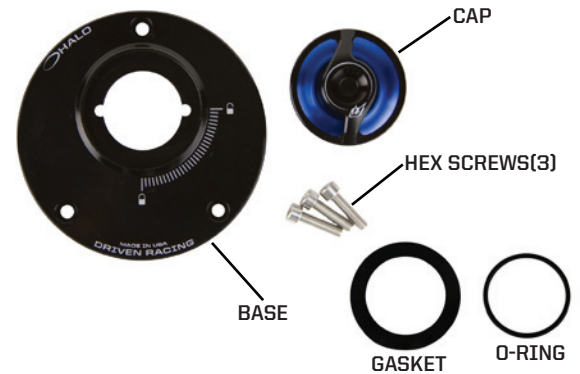

**THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN\***

**FOR OFF ROAD/RACE USE ONLY!**



**Part#:DHFCB-TR(01)-XX/DHFC (DRIVEN HALO FUEL BASE/CAP)  
INSTALLATION INSTRUCTIONS**

**NOTE: These instructions apply to DFCHB-TR(01)**

1. Make sure you have all of the required parts for installation. (see checklist below)
  2. Remove stock (OEM) fuel cap.
  3. Make sure both base and cap gaskets are installed. \*Can be used with OEM dish gasket.
  4. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws.
- Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

**TOOLS REQUIRED**


- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

**TORQUE SPECS AND INFO**

- All Hardware: 6FT/LB

**PARTS CHECKLIST**

- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)

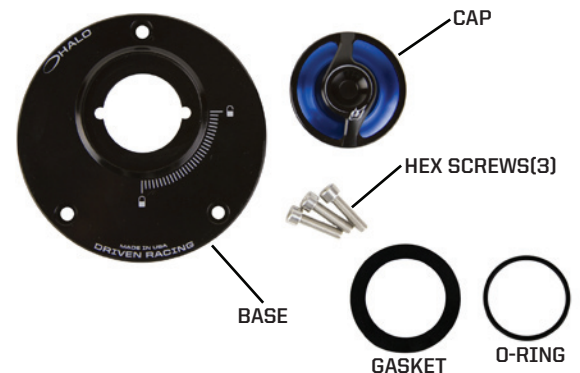

**THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN\***