



# SUPPLEMENTARY MANUAL

for ESE-H01

REMOVE THE MAIN SEAT.



UNPLUG THE  
EXHAUST SERVO-MOTOR  
CONNECTORS.  
(BLUE, 6-POLE CONNECTOR  
BELOW MAIN SEAT AT LEFT SIDE)



REMOVE THE COVER OF EXHAUST  
SERVO-MOTOR.  
REMOVE EXHAUST SERVO-MOTOR.




# Honda CBR600RR

2008-2012



PLUG ESE CONNECTOR TO  
EXHAUST SERVO-MOTOR  
CONNECTOR.

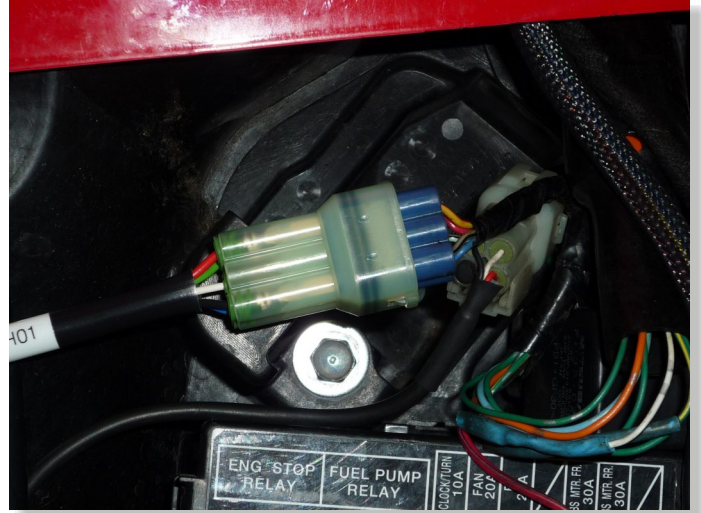

TYPICAL POSITION  
FOR EXHAUST SERVO ELIMINATOR.

