



SUPPLEMENTARY MANUAL

for ESE-H02

REMOVE EXHAUST SERVO-MOTOR.



UNPLUG THE
EXHAUST SERVO-MOTOR
CONNECTOR.
(BLACK, 6-POLE CONNECTOR AT RIGHT SIDE)



PLUG ESE CONNECTOR TO
EXHAUST SERVO-MOTOR
CONNECTOR.



Honda CBF1000

2010-2014



TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.

