



SUPPLEMENTARY MANUAL

for ESE-H02

REMOVE THE MAIN SEAT.



REMOVE THE FRAME COVER FROM
RIGHT SIDE BELOW SEAT.



UNPLUG THE
EXHAUST SERVO-MOTOR
CONNECTOR.

(BLACK, 6-POLE CONNECTOR AT RIGHT SIDE)

REMOVE EXHAUST SERVO-MOTOR.



Honda VFR1200

2010-2014



PLUG ESE CONNECTOR TO
EXHAUST SERVO-MOTOR
CONNECTOR.



TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.

