



# SUPPLEMENTARY MANUAL

for ESE-K01

REMOVE BLACK FRAME COVERS  
BELOW MAIN SEAT.  
REMOVE MAIN AND PASSANGER  
SEATS.



LIFT UP OR REMOVE THE  
TAIL COVER.



UNPLUG THE  
EXHAUST SERVO-MOTOR  
CONNECTORS.  
(WHITE, 3-POLE TRIANGULAR AND TRANSPARENT, 2-  
POLE CONNECTORS BELOW MAIN SEAT)  
REMOVE THE EXHAUST SERVO-  
MOTOR.  
(BELOW MAIN SEAT)




# Kawasaki ZX-10R

2006-2007



PLUG ESE CONNECTORS TO  
EXHAUST SERVO-MOTOR  
CONNECTORS.

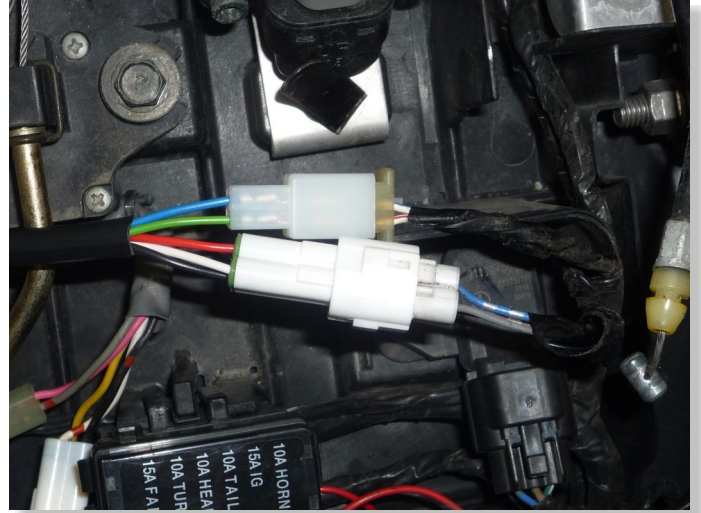

TYPICAL POSITION  
FOR EXHAUST SERVO ELIMINATOR.

