



SUPPLEMENTARY MANUAL

for ESE-K01

REMOVE THE BLACK FRAME
COVERS BELOW FUEL TANK.



REMOVE THE MAIN SEAT.



REMOVE EXHAUST SERVO-MOTOR.
(BELOW MAIN SEAT)



Kawasaki ZX-6R

2013-2015




UNPLUG THE EXHAUST SERVO-MOTOR CONNECTORS.

(WHITE, 3-POLE TRIANGULAR AND WHITE, 2-POLE
CONNECTORS BELOW MAIN SEAT)



PLUG ESE CONNECTORS TO EXHAUST SERVO-MOTOR CONNECTORS.

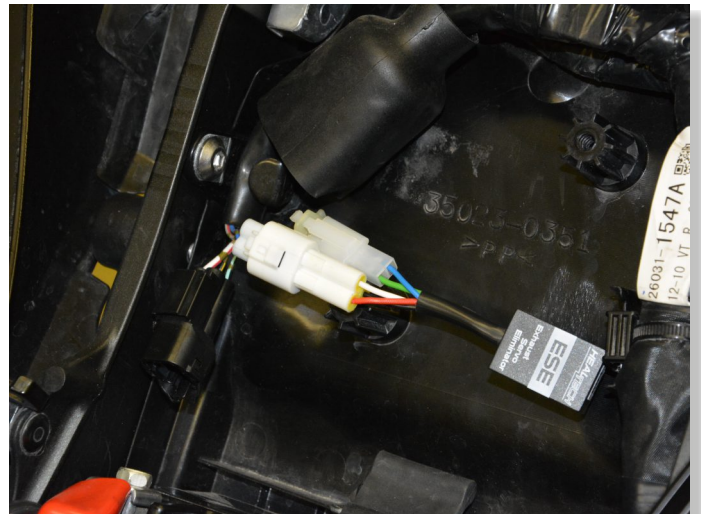

TYPICAL POSITION FOR EXHAUST SERVO ELIMINATOR.

