



SUPPLEMENTARY MANUAL

for ESE-Y01

REMOVE THE SEAT.
REMOVE THE FUEL TANK.



UNPLUG EXHAUST SERVO-MOTOR
CONNECTOR.
(BLACK, 6-POLE CONNECTOR BEHIND ENGINE)
REMOVE THE
EXHAUST SERVO-MOTOR.



PLUG ESE CONNECTOR TO
EXHAUST SERVO-MOTOR
CONNECTOR.



Yamaha MT-01

2005-2012



TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.

