




SUPPLEMENTARY MANUAL

for ESE-Y01

REMOVE THE LOWER FAIRING ON
LEFT SIDE.



UNPLUG EXHAUST SERVO-MOTOR
CONNECTOR.
(BLACK, 6-POLE CONNECTOR BEHIND SIDE STAND)
REMOVE THE
EXHAUST SERVO-MOTOR.

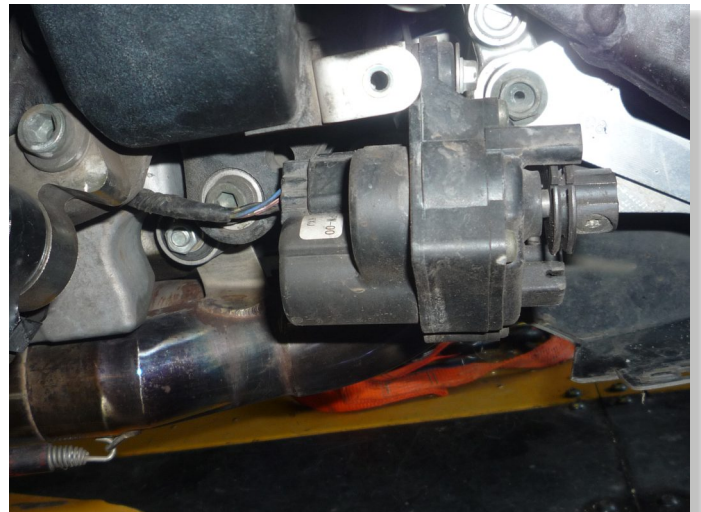

PLUG ESE CONNECTOR TO
EXHAUST SERVO-MOTOR
CONNECTOR.



Yamaha R1 2007-2008



TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.

