




SUPPLEMENTARY MANUAL

for ESE-Y01

REMOVE THE SEAT.



REMOVE THE FRAME COVER
AT LEFT SIDE BELOW SEAT.

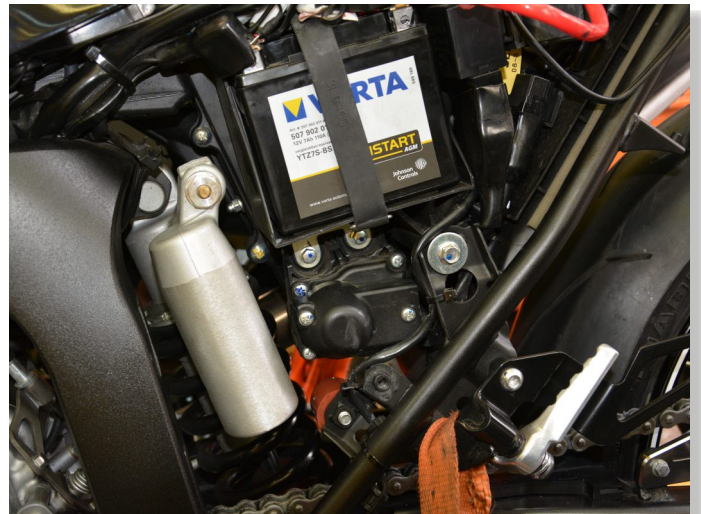

REMOVE THE
EXHAUST SERVO-MOTOR.



Yamaha WR250X

2006-2010



**UNPLUG EXHAUST SERVO-MOTOR
CONNECTOR.**
(BLACK, 6-POLE CONNECTOR)



**PLUG ESE CONNECTOR TO
EXHAUST SERVO-MOTOR
CONNECTOR.**



**TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.**

