




# SUPPLEMENTARY MANUAL

for GIPRO-K02


REMOVE THE LEFT AND RIGHT SIDE  
COVERS UNDER MAIN SEAT AND  
FUEL TANK.  
REMOVE THE MAIN SEAT.  
REMOVE THE STEERING DAMPER.  
LIFT UP OR REMOVE  
THE FUEL TANK.

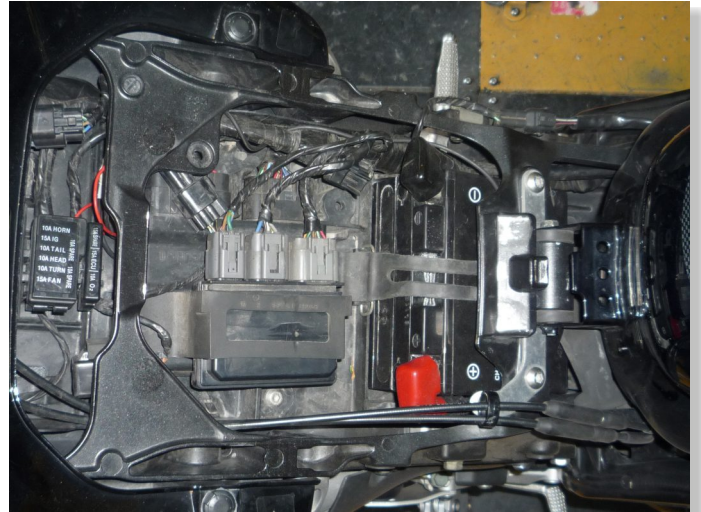

RELEASE AND REMOVE  
THE MIDDLE TWO PINS  
FROM FEMALE CONNECTOR.  
(GRAY, 10-POLE CONNECTOR  
UNDER FUEL TANK AT THE LEFT SIDE)  
(BLACK/YELLOW AND WHITE/YELLOW WIRES)



INSERT THE TWO FEMALE  
METAL CONTACTS INTO THE  
SMALLER 3-POLE TRIANGULAR PLUG  
THROUGH THE BACK  
UNTIL THEY CLICK INTO PLACE.

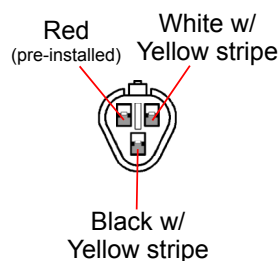

# Kawasaki ZX-10R

2006-2007



**RELEASE AND REMOVE  
THE MIDDLE TWO PINS  
FROM MALE CONNECTOR.**

(GRAY, 10-POLE CONNECTOR  
UNDER FUEL TANK AT THE LEFT SIDE)  
(BLACK AND GREEN/RED WIRES)



**INSERT THE TWO MALE  
METAL CONTACTS INTO THE  
LARGER 3-POLE TRIANGULAR PLUG  
THROUGH THE BACK UNTIL THEY  
CLICK INTO PLACE.**

Green w/  
Red stripe



Black



**PLUG ATRE CONNECTORS IN-LINE  
WITH THE TWO CONNECTORS.**  
(WHITE, 3-POLE TRIANGULAR CONNECTORS)





# Kawasaki ZX-10R

2006-2007



**CONNECT ATRE RED WIRE TO  
BROWN WIRE OF  
REAR BRAKE LIGHT SWITCH  
CONNECTOR.**

(TRANSPARENT, 2-POLE CONNECTOR  
UNDER FUEL TANK)



**TYPICAL POSITION FOR THE  
GEAR INDICATOR.**

(TRE MODE: 1)

