




SUPPLEMENTARY MANUAL

for GPX-U01

REMOVE THE MAIN SEAT.

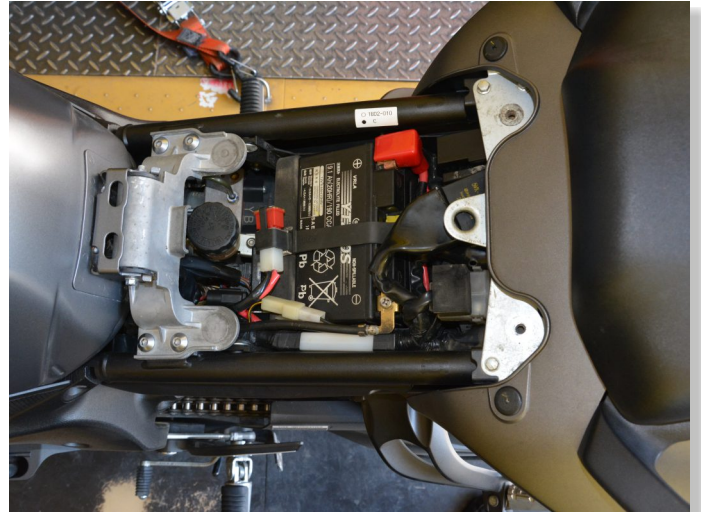

REMOVE THE
UPPER SIDE COVER
FROM LEFT SIDE.



REMOVE THE
UPPER SIDE COVER
FROM RIGHT SIDE.



Yamaha FZ-8 ABS


2010-2015




REMOVE THE TANK COVER.



REMOVE THE FUEL TANK.

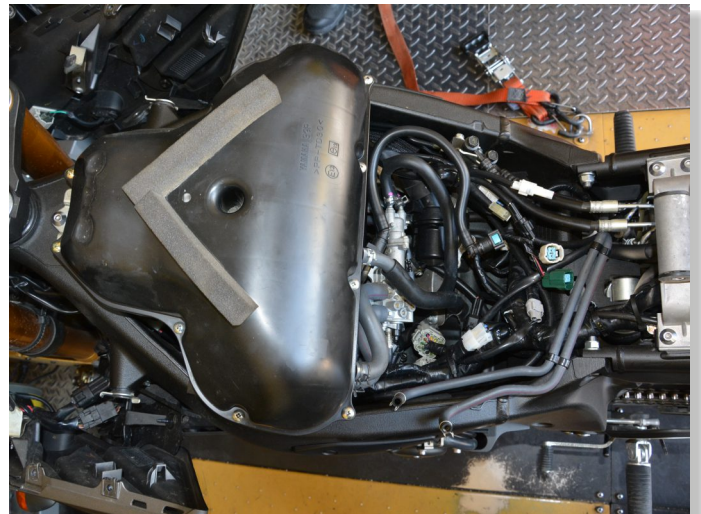

REMOVE THE AIRBOX.
ECU/ECM LOCATED BELOW
THE AIRBOX.

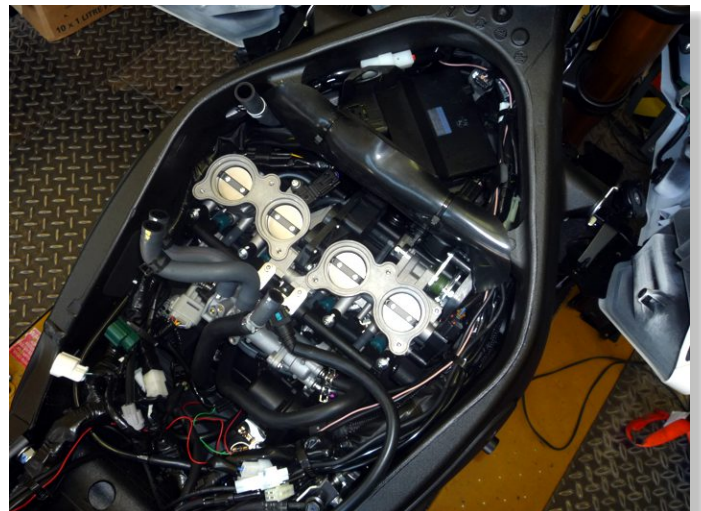

Yamaha FZ-8 ABS

2010-2015




**CONNECT THE GPX WIRES TO
THE ECU/ECM WIRES.**


**CONNECT GPX WHITE WIRE TO
WHITE/YELLOW WIRE OF ECU/ECM.**
(BIG CONNECTOR, PIN #23)

**CONNECT GPX GREEN WIRE TO
GRAY WIRE OF ECU/ECM.**
(SMALL CONNECTOR, PIN #5)

**CONNECT GPX RED WIRE TO
RED/WHITE OF ECU/ECM.**
(SMALL CONNECTOR, PIN #9)

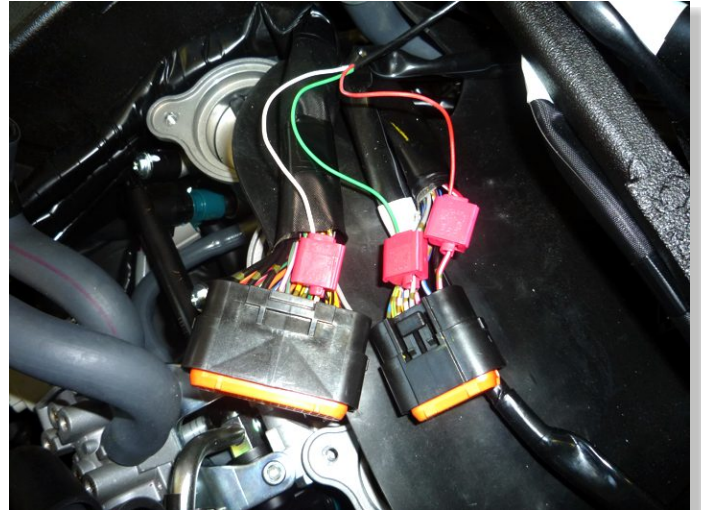

**CONNECT THE GPX BLACK WIRE
TO THE MAIN GROUND TERMINAL
NEAR THE TOP SHOCK MOUNT.**

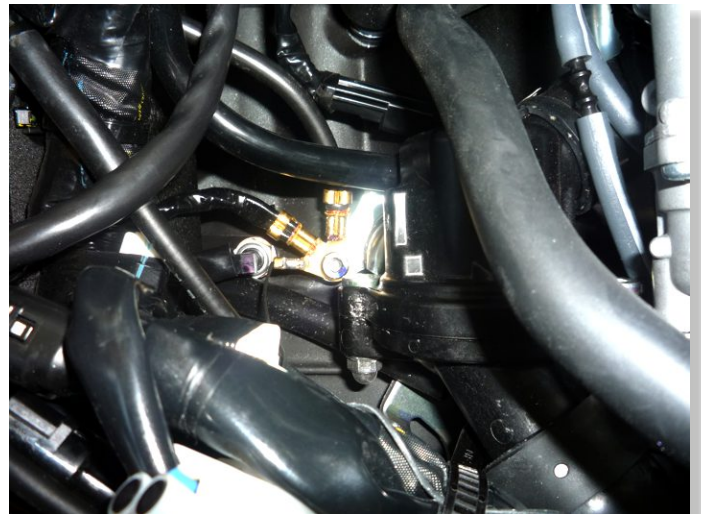

**TYPICAL POSITION FOR THE
GEAR INDICATOR.**

