

## **INTERNATIONAL**

(FOR USE WITH IMMOBILIZERS)

1. The immobilizer is located in the housing mounted on top of the ignition switch by 2 torx fasteners. Remove the torx fasteners from the immobilizer sensor housing to separate it from the ignition switch.

2. Insert the key into the sensor as shown in Fig 1.

3. Secure the key in place, using electrical tap or similar, as shown in Fig 2.

4. The immobilizer can now be reconnected and installed on the motorcycle.

5. The key switch elimination harness can now be installed. The smaller 2 pin connector with the 2 blue wires will not be plugged in for models with an immobilizer. See Fig 3.



Fig 1

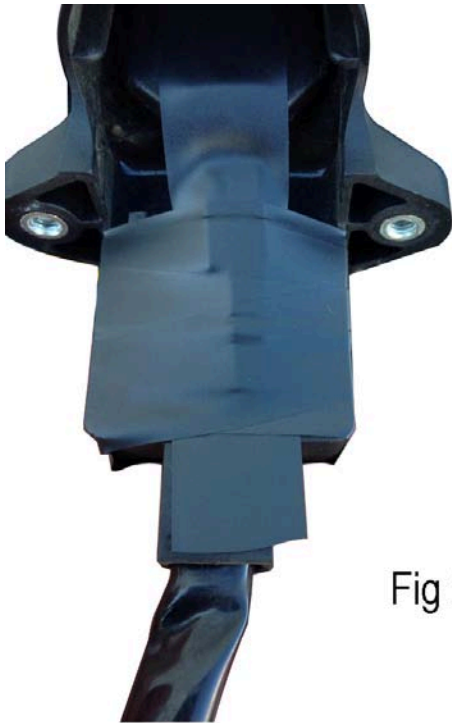


Fig 2



Fig 3