

# RS636K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## SHIFT SIDE EXPLODED VIEW



### INDEX




Lubricate



Thread Lock




Use Factory Piece

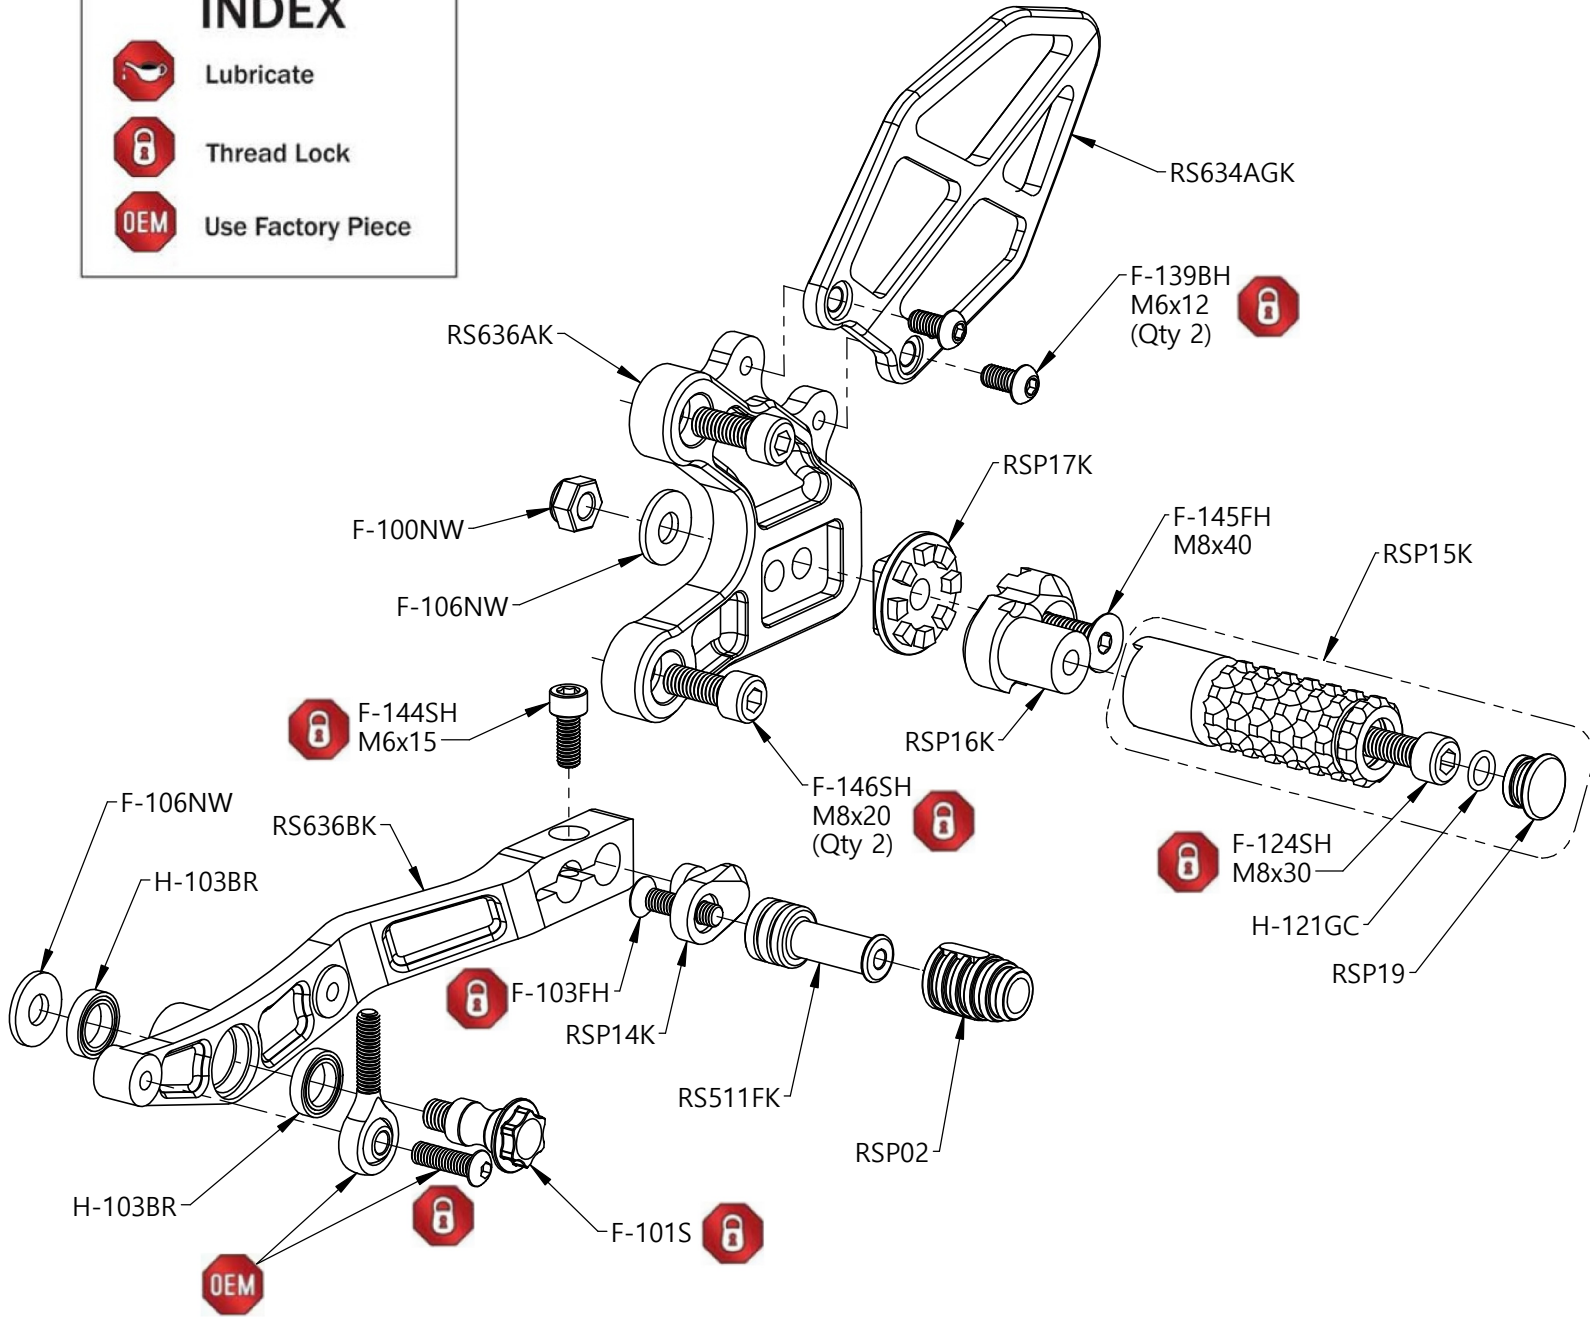

NOTE: SHIFT CONFIGURATION

STANDARD  
SHIFT

GP SHIFT

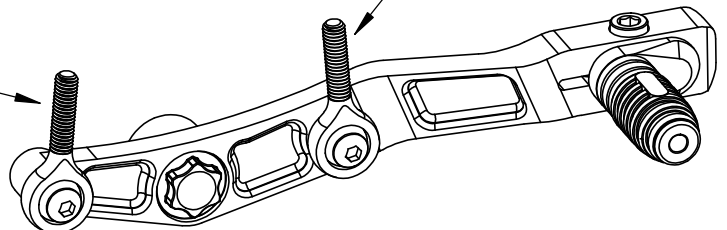

1.800.440.3559  
www.VORTEXRACING.com