



RS186K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

How to adjust Footpeg positions

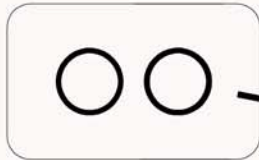

1) Decide which mounting hole in pocket to use.

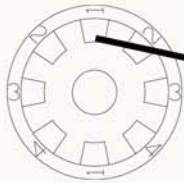


2) Position #1 at 12 o'clock position for shift and brake. Be sure other numbers are not upside down.




3) Tab reader will indicate which position you are on.
CAUTION - Each number has two positions. Be sure to use the same position for shift and brake side.

Example

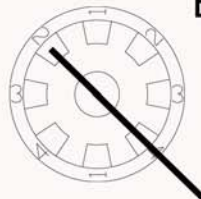

#2 position


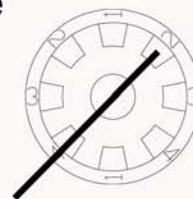


#2 position



OEM Footpeg position

Adjustment Positions (Shift Side example)

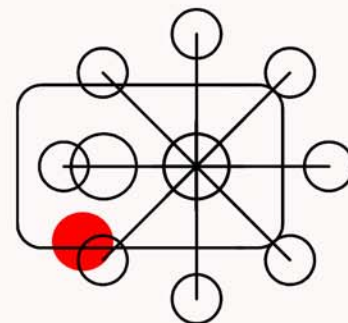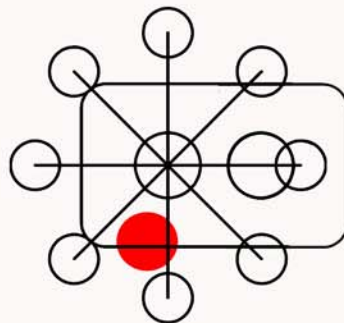

Adjustment Range

Back	31mm
Forward	15mm
Up	27mm
Down	7mm



1.800.440.3559

www.VORTEXRACING.com