

# RS591K INSTRUCTIONS



TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## BRAKE SIDE EXPLODED VIEW



**INDEX**

-  Lubricate
-  Thread Lock
-  Use Factory Piece

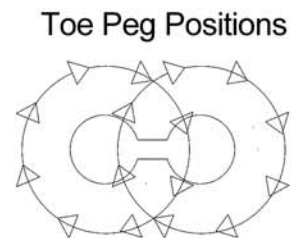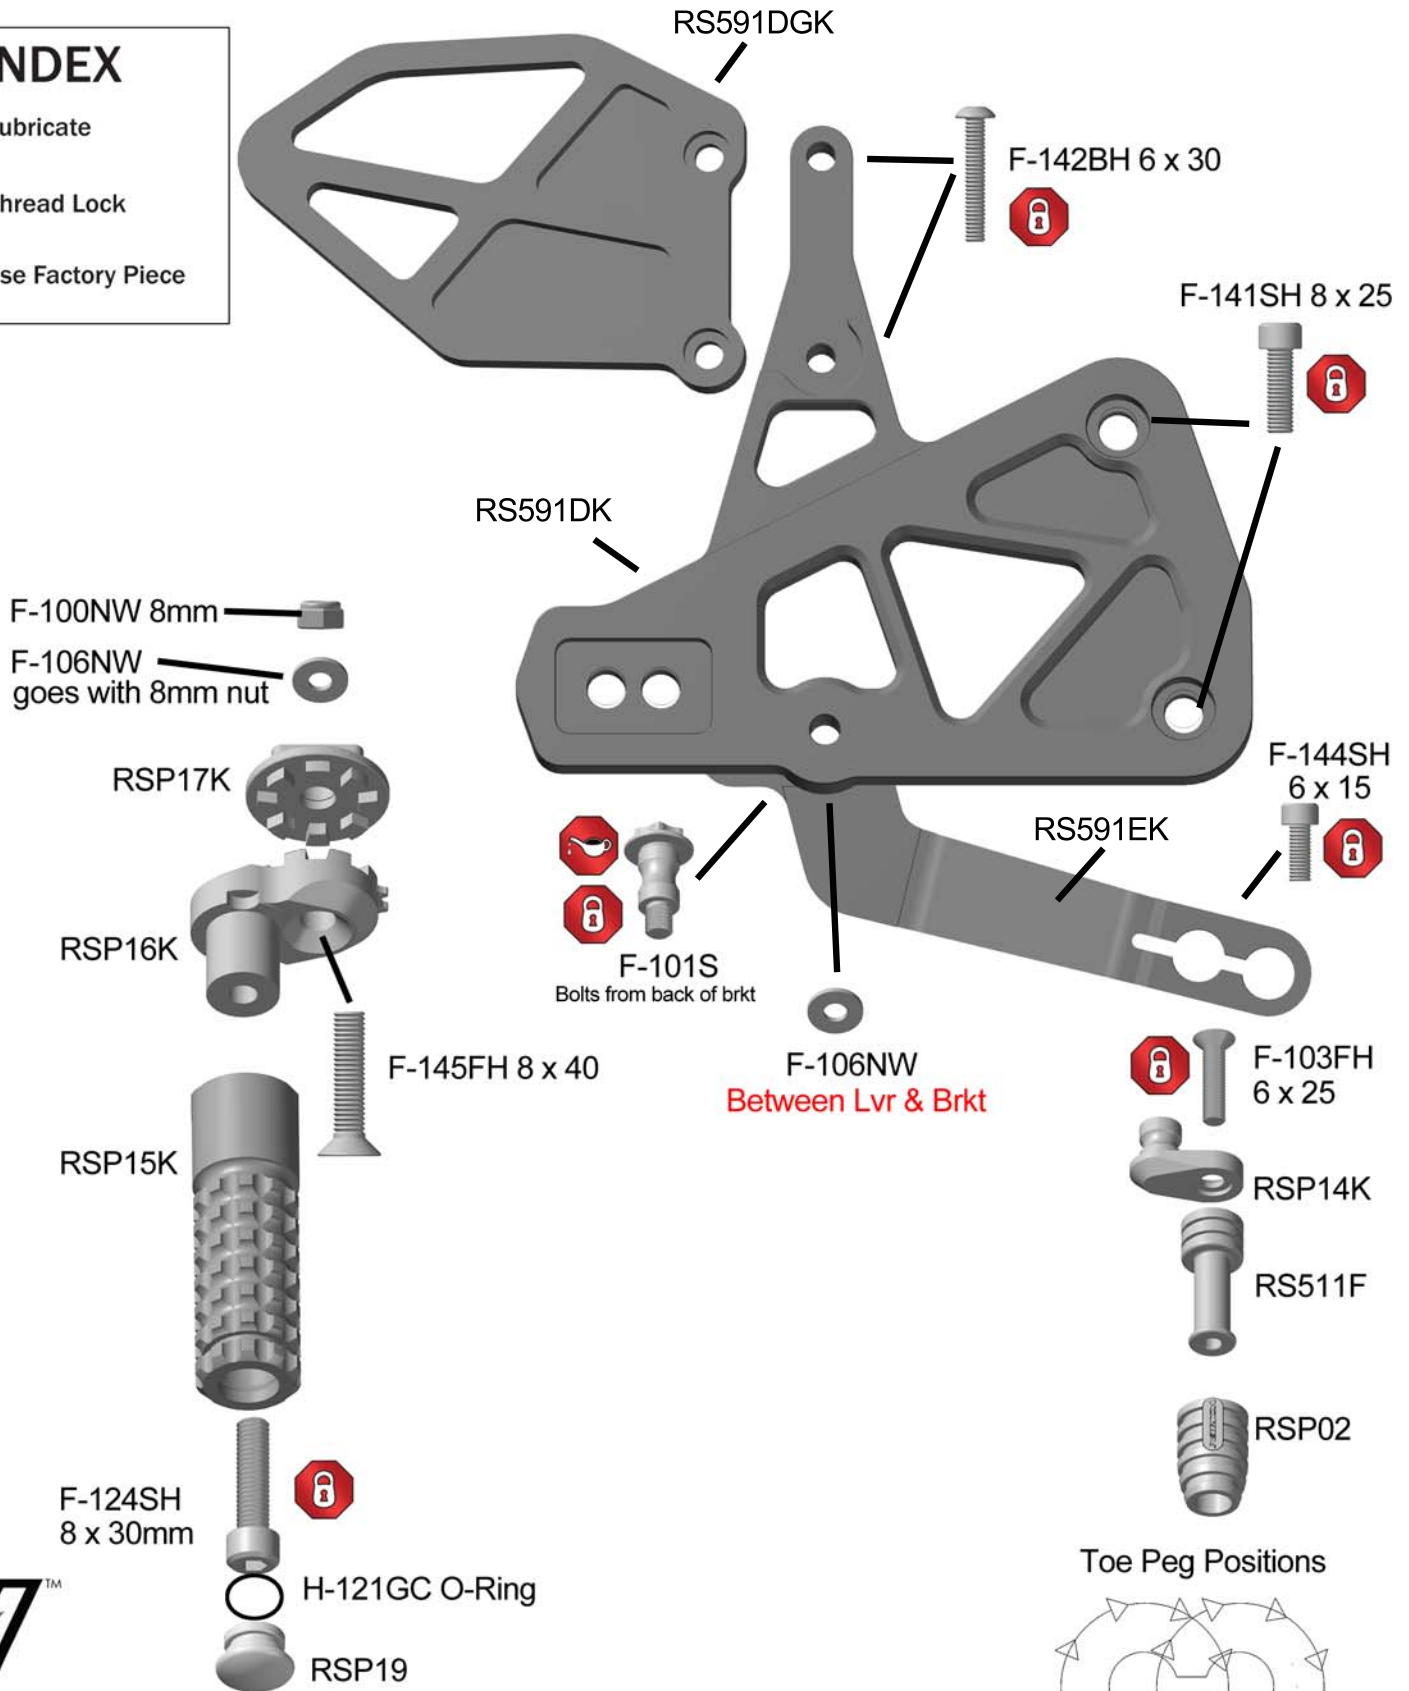

# RS591K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## SHIFT SIDE EXPLODED VIEW



**INDEX**

-  Lubricate
-  Thread Lock
-  Use Factory Piece

