



RS591K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

How to adjust Footpeg positions

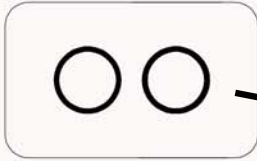

1) Decide which mounting hole in pocket to use.

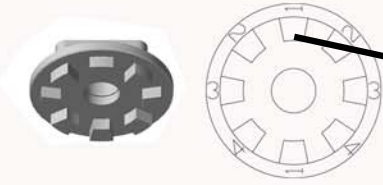


2) Position #1 at 12 o'clock position for shift and brake.
Be sure other numbers are not upside down.




3) Tab reader will indicate which position you are on.

CAUTION - Each number has two positions. Be sure to use the same position for shift and brake side.

Example


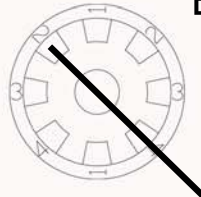


#2 position

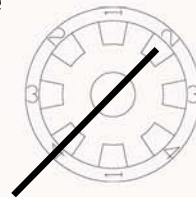

#2 position

Footpeg positions

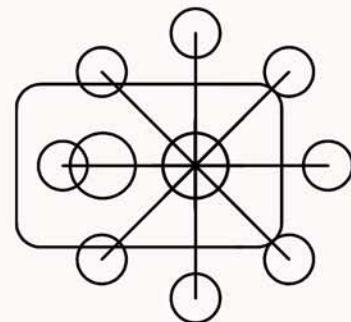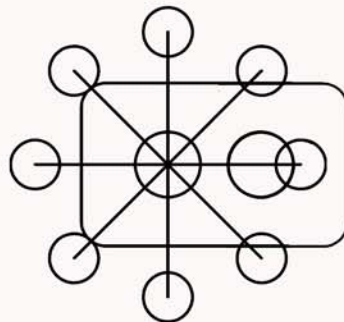

1.800.440.3559

www.VORTEXRACING.com