

RC Watch

Quick Start Guide

MODE/SLEEP button

PHOTO button

SET button

Charging port

LEFT button

RIGHT button

VIDEO button

Charging Battery

When the battery power is running low, do the following to charge the battery:

- Open the charging port cover.
- Connect one end of the Pogo cable to the charging port of your watch.
- Connect the end of the Pogo cable to the USB port of a computer or AC adapter to charge battery.

Set Auto Power Off

- Press the **MODE** button to switch to **Preview** mode. Then press and hold the **SET** button to enter to **SET** mode.
- Use the **LEFT** or **RIGHT** button to select **Auto off** and press the **VIDEO** button to enter **Auto Power Off** menu.
- Use the **LEFT** or **RIGHT** button to select the desired setting and press the **VIDEO** button to confirm.

Enable/Disable Sound

- Press the **MODE** button to switch to **Preview** mode. Then press and hold the **SET** button to enter to **SET** mode.
- Use the **LEFT** or **RIGHT** button to select **Sound** and press the **VIDEO** button to enter **Sound** menu.
- Use the **LEFT** or **RIGHT** button to enable/disable sound and press the **VIDEO** button to confirm.

Adjust Brightness Level

- Press the **MODE** button to switch to **Preview** mode. Then press and hold the **SET** button to enter to **SET** mode.
- Use the **LEFT** or **RIGHT** button to select **Bright** and press the **VIDEO** button to enter **Brightness** menu.
- Use the **LEFT** or **RIGHT** button to select the brightness level and press the **VIDEO** button to confirm.

Live View Mode

When the devices are paired, the live view appears on the screen and you can use this watch as a remote control to record videos or capture photos.

- Press the **MODE** button to switch to **Preview** mode. The live view appears on the screen.
- Do the following:
 - To record videos: Press the **VIDEO** button to start recording. Press the **VIDEO** button again to stop video recording.
 - To capture photos: Press the **PHOTO** button.

Live view icon indicators

- (orange) - card full
- (blue) - recording
- (gray)- standby (already connected to camera)
- (black)- disconnected

Clock Mode

In this mode, this watch can be used as a clock, stopwatch, countdown clock, and alarm clock.

Set Date and Time

- Press and hold the **SET** button to enter the *setting* mode.
- Press the **RIGHT** button repeatedly to select the field that you want to adjust.
- Use the **VIDEO** or **PHOTO** button to adjust the value or set time format or the color of the LED clock display.
- Repeat steps 2-3 to adjust other fields.
- Press the **SET** button to save your changes.

Time format

Number color

Stopwatch

- Press the **LEFT** button repeatedly to switch to **Stopwatch** mode.
- Press the **VIDEO** button to start the timer.
- To record a lap while the timer is running, press the **RIGHT** button. It displays the last lap time.
 - Repeat this step to create a new lap. You can record up to 12 laps.
- To stop the timer, press the **VIDEO** button.
- To reset the timer, press the **SET** button.

Countdown Clock

- Press the **LEFT** button repeatedly to switch to **Countdown Clock** mode.
- To start the countdown, press the **VIDEO** button.
- To pause the countdown, press the **VIDEO** button.
 - To resume, press the **VIDEO** button again.
 - To reset the countdown, press the **SET** button.

To set the countdown time, do the following:

- Press and hold the **SET** button. Then press the **RIGHT** button repeatedly to select the field that you want to adjust.
- Use the **VIDEO** or **PHOTO** button to adjust the value.
- Press the **SET** button to confirm.

Alarm Clock

- Press the **RIGHT** button repeatedly to switch to **Alarm Clock** mode.
- To activate an alarm, press the **VIDEO** button to select **ON**.

To set the alarm time, do the following:

- Press and hold the **SET** button. Then press the **RIGHT** button repeatedly to select the field that you want to adjust.
- Use the **VIDEO** or **PHOTO** button to adjust the value.
- Press the **SET** button to confirm.

Setup Mode

In this mode, it allows to pair with a camera, set auto power off, enable/disable sound, and adjust the brightness setting.

Pair with Camera

- On your camera, press the **Mode** button repeatedly to change to **SET** mode.
- Press the **Shutter** button to enter **SET** mode.
- Press the **Mode** button to highlight **MORE**. Then press the **Shutter** button to enter the **MORE** menu.
- Press the **Mode** button to highlight **BINDING**.
- Press the **Shutter** button to enter the **BINDING** submenu. The camera RF antenna is enabled and ready for pairing.

- On your RC watch, press the **MODE** button to switch to **Preview** mode. Then press and hold the **SET** button to enter to **SET** mode.
- Use the **LEFT** or **RIGHT** button to select **Pairing** and press the **VIDEO** button to enter **Pairing** menu.

FCC Statement

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off.

The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Video button and Photo button in Live view mode

Action Cam Mode	RC Watch	
	Video Button	Photo Button
Video	Video	Photo <i>Note: "PIV" is available when camera is recording.</i>
Photo	Video	Photo
Burst	Video	Burst
Time Lapse @ video	Start/Stop	Photo <i>Note: PIV is available when camera is processing Time Lapse @video.</i>
Time Lapse @ photo	Start/Stop	Photo
Self Timer	Video	Self Timer
Looping	Looping start/stop	N/A
Set up/Wi-Fi...	Video	Photo

Note: With PIV (Photo In Video) feature, you can take a photo when you are recording a video.

Troubleshooting

Problem	Possible Cause	Solution
A black screen appears on the screen and all buttons are inactive.	The battery is running out.	Connect pogo cable and the battery will start charging after 10 seconds.
The screen appears unusually and all buttons are inactive.	The watch is shutting down.	Connect the end of the Pogo cable to the USB port of a computer. After 10 seconds, the watch will restart.
	The micro SD card is not inserted.	Insert a micro SD card into camera card slot. (Note: If you use internal memory to record video, the live view will disappear when you start recording.)
	The battery is running out.	Connect the pogo cable to charge battery.