



SUPPLEMENTARY MANUAL

for XT-K01

REMOVE THE BLACK COVERS
BELOW MAIN SEAT.
REMOVE THE MAIN SEAT.
LIFT UP OR REMOVE
THE FUEL TANK.



UNPLUG THE GPS CONNECTOR.
(BLACK, 6-POLE CONNECTORS
BELOW THE FUEL TANK AT RIGHT SIDE)



RELEASE AND REMOVE TWO
TERMINALS FROM SMALLER,
6-POLE CONNECTOR.
(WHITE/YELLOW AND BLACK WIRES)



Kawasaki ZX-6R


2007-2008




**INSERT THE BLACK AND
WHITE/YELLOW WIRES INTO THE
SMALLER WHITE, 2-POLE
CONNECTOR.**



**RELEASE AND REMOVE TWO
TERMINALS FROM LARGER,
6-POLE CONNECTOR.
(GREEN/RED AND BLACK WIRES)**

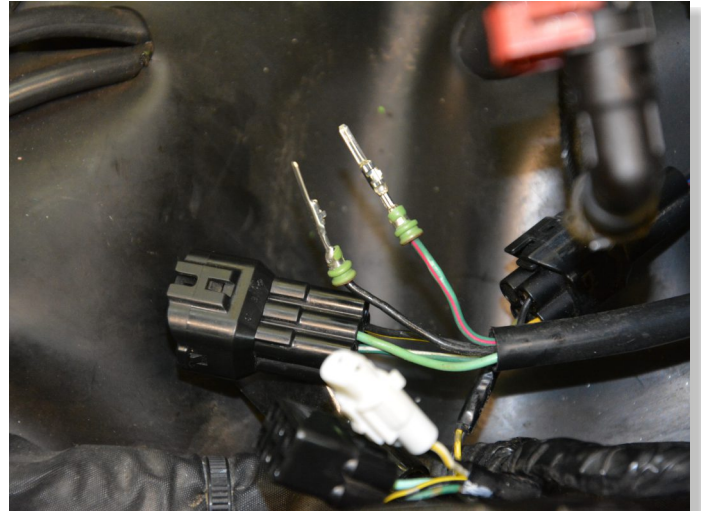

**INSERT THE BLACK AND GREEN/RED
WIRES INTO THE LARGER WHITE,
2-POLE CONNECTOR.**

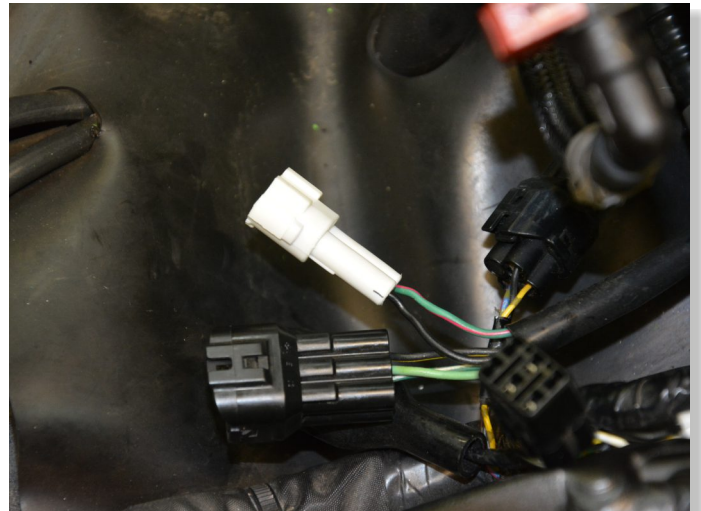

Kawasaki ZX-6R

2007-2008



PLUG X-TRE CONNECTORS IN-LINE WITH THE WHITE, 2-POLE CONNECTORS.

MOUNT THE X-TRE BOX TO THE INNER SIDE OF THE FRAME BY THE SUPPLIED VELCRO STRIPS, AND SECURE THE BOX AND CABLES WITH CABLE TIES.



LOCATE ECU WIRING HARNESS UNDER MAIN SEAT, UNDER THE STARTER RELAY. LOCATE THE BROWN/RED WIRE AMONG THE ECU WIRES. CUT THE BROWN/RED WIRE.



CONNECT THE X-TRE BLACK/GREEN WIRE TO BROWN/RED WIRE END, WHICH GOES TO THE ECM CONNECTOR.



Kawasaki ZX-6R

2007-2008



CONNECT THE X-TRE BLACK/WHITE WIRE TO BROWN/RED WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.



CONNECT X-TRE RED WIRE TO RED/BLUE WIRE OF REAR BRAKE LIGHT SWITCH CONNECTOR.

(TRANSPARENT, 2-POLE CONNECTOR BELOW FUEL TANK)

(X-TRE MODE: 6)

