

Installation instructions

Akrapovič Exhaust System

Slip-On

for the

Kawasaki Ninja ZX-6R

Kawasaki 636 Ninja ZX-6R





Congratulations on purchasing the Akrapovič exhaust system. The Akrapovič exhaust system is a product of Akrapovič d.d., Malo Hudo 8a, 1295 Ivančna Gorica, Slovenia ("Akrapovič").

Please read this entire installation manual carefully prior to installing and using the Akrapovič exhaust system.

Akrapovič exhaust system should only be installed by persons skilled in motorcycle exhaust system installation and performance. The instructions provided in this manual should be followed to ensure proper installation and safe use of the Akrapovič exhaust system. Akrapovič and/or its partners shall not be held liable for any damage or personal injury (including direct, indirect, or consequential damage) sustained as a result of improper installation of the Akrapovič exhaust system or its use and maintenance contrary to the instructions and warnings contained herein.

If you have any questions regarding the installation and/or proper use of the Akrapovič exhaust system or this manual, please contact your local Akrapovič partner.

For more information on the Akrapovič exhaust systems, see the official Akrapovič website at: http://www.akrapovic.com

GENERAL INFORMATION

Your safety is our number one priority. Please ride your motorcycle responsibly, safely and always obey local traffic rules.

All statements made with regard to the exhaust system's compliance are made in respect of the exhaust system "as is". Any modifications of the Akrapovič exhaust system or its improper installation, use or maintenance that is not in accordance with this Installation manual, may result in severe damage to the exhaust system and/ or engine, as well as personal injury, and may affect the exhaust system's compliance with the legal requirements, such as exhaust system's air and/ or noise emissions (as an example, the motorcycle may not be suitable for use on public roads any longer), as well as warranty coverage.

The exhaust system may only be used in accordance with relevant laws and regulations, including state and federal, where applicable.

Damage caused by improper installation, use and maintenance of the Akrapovič exhaust system is not covered by the Akrapovič warranty. Please refer to the enclosed warranty with regard to the terms of our warranty.

Technical specifications of Akrapovič exhaust systems and related products are subject to change without notice.

COPYRIGHT AND OTHER RIGHTS NOTICE

The Akrapovič trademark, including corporate logos and emblems, are subject to copyright as well as trademark rights of Akrapovič, its licensors, or third persons authorizing Akrapovič to use them.

Any reproduction, technical or other manipulation, translation, or other use of the copyright and/or trademark rights contained herein is prohibited without the explicit prior written consent of Akrapovič. The same especially applies to the entire contents of this manual and/or any of its parts, including but not limited to technical specifications, instructions, graphs, photographs, and so on included in this manual.


The shape of the exhaust system is protected under a registered Community Design No. RCD 002747329-0001.

Akrapovič takes all copyright and other rights infringement cases under serious consideration. If you have any reason to believe that your exhaust system is not an original Akrapovič product, please contact our local partners or Akrapovič at info@akrapovic.com.

SAFETY AND COMPLIANCE WARNING, PLEASE READ CAREFULLY

BEFORE REMOVING THE STOCK EXHAUST SYSTEM AND BEGINNING THE INSTALLATION OF YOUR NEW AKRAPOVIČ EXHAUST, PLEASE MAKE SURE THAT ALL ITEMS LISTED BELOW ARE VERIFIED:

- THIS MANUAL IS SPECIFIC TO THE MOTORCYCLE INDICATED ON THE COVER PAGE, FOR WHICH IT IS
 DESIGNED. INSTALLATION PROCEDURES VARY DEPENDING ON THE TYPE OF MOTORCYCLE. PLEASE
 VERIFY THAT THE AKRAPOVIČ EXHAUST SYSTEM AND THIS INSTALLATION MANUAL CORRESPOND
 TO THE TYPE OF YOUR MOTORCYCLE.
- THE EXHAUST SYSTEM CAN GET EXTREMELY HOT DURING AND AFTER IT IS USED. MAKE SURE NOT TO TOUCH THE EXHAUST SYSTEM UNTIL IT IS COMPLETELY COOL. **ALLOW THE EXHAUST AND ENGINE TO COOL DOWN BEFORE BEGINNING INSTALLATION.**
- MAKE SURE THE MOTORCYCLE IS **SECURELY POSITIONED TO PREVENT TIPPING OVER** AND DAMAGE TO YOURSELF AND OTHERS, OR THE MOTORCYCLE.
- PLEASE CHECK THE PARTS YOU RECEIVED AGAINST THE PARTS LIST AVAILABLE ON OUR WEBSITE
 (PLEASE USE THE QR CODE ON THE FRONT PAGE OR LOOK FOR "SCHEMATIC VIEW" IN THE
 RESPECTIVE PRODUCT PAGE ON WWW.AKRAPOVIC.COM). MAKE SURE THAT YOU HAVE ALL THE
 PARTS NECESSARY FOR THE INSTALLATION OF YOUR NEW AKRAPOVIČ EXHAUST SYSTEM. IF ANY
 OF THE PARTS IS MISSING, PLEASE DO NOT PROCEED WITH UNINSTALLING YOUR STOCK EXHAUST
 SYSTEM/ INSTALLING THE AKRAPOVIČ EXHAUST SYSTEM AND CONTACT THE RETAILER WHERE YOU
 PURCHASED THE AKRAPOVIČ EXHAUST SYSTEM.
- ALWAYS SECURE YOUR MOTORCYCLE'S GROUND CLEARANCE. FOR ADVANCED USERS, WE RECOMMEND YOU CHECK THE MOTORCYCLE SPRING PRELOAD SETTINGS TO OPTIMIZE GROUND CLEARANCE WHERE POSSIBLE.
- EVERY EXHAUST SYSTEM MUFFLER HAS ITS UNIQUE SERIAL NUMBER, WHICH IDENTIFIES THE
 AUTHENTICITY OF THE PRODUCT. YOU CAN FIND THE SERIAL NUMBER ON THE MUFFLER'S INLET
 PIPE. PLEASE REFER TO THE PICTURE BELOW. PLEASE VERIFY THAT YOUR EXHAUST SYSTEM IS
 AN ORIGINAL AKRAPOVIČ PRODUCT. IF YOU HAVE ANY DOUBTS, PLEASE CONTACT THE RESELLER
 WHERE YOU PURCHASED THE EXHAUST SYSTEM OR AKRAPOVIČ PARTNERS. THIS MANUAL, ANY
 CERTIFICATES AND AKRAPOVIČ WARRANTY APPLY TO ORIGINAL PRODUCTS ONLY.

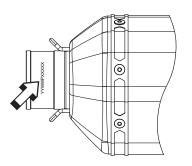



SERIAL NUMBER POSITION

NOISE AND EMISSION WARNINGS

General warning

Because of the world-wide distribution of Akrapovič d.d. products, neither Akrapovič d.d. nor any of its subsidiaries make any representation that the exhaust system complies with the air and/or noise emissions laws, or labeling laws, of any jurisdiction. The purchasers are entirely responsible for informing themselves of the applicable laws where the products are to be used and to comply with those law.

Although legal compliance of Akrapovič products in a specific country should be determined by the user, you can find some basic guidance on compliance of your Akrapovič exhaust system with various legal requirements on the product-related part of our website (please use the QR code on the front page or look for the respective product page on www.akrapovic.com). For EC and ECE type approvals, please refer to the certificate enclosed to your product.

USA WARNING

Various U.S. states and the U.S. federal government have individual laws regulating the use of aftermarket exhaust parts and systems, especially as those parts and systems modify, remove, or replace original equipment catalysts. Please consult the appropriate laws in your area before installing any aftermarket part or system on your vehicle to ensure compliance with all applicable laws. Neither Akrapovic d.d. nor any of their subsidiaries or the sellers of the parts or systems make any representation that any of their parts or systems comply with any such laws.

CALIFORNIA WARNING

California laws prohibit the use of any aftermarket exhaust part or system that modifies, removes or replaces original equipment catalysts unless the California Air Resources Board has issued an Executive Order regarding such part or system or unless the part or system is exempted by being used only on racing vehicles on closed courses. Neither Akrapovic d.d. nor any of their subsidiaries make any representation that any of their parts or systems has received such an Executive Order or that any of their parts or systems conform with the racing vehicles exemption. The purchasers are entirely responsible for informing themselves of applicable California laws and to comply with those laws.

GENERAL NOTE

Photographs and other illustrations in this manual are symbolic and are intended to help represent individual steps for proper installation and use, as well as for a general overview. The actual component parts of the Akrapovič exhaust system may not entirely correspond to the photographs and other illustrations.

SYMBOLS

The following symbols are used throughout these installation instructions:



TOOLS AND PROTECTIVE EQUIPMENT REQUIRED



TIGHTENING TORQUE



LUBRICATION



HAND TIGHTEN



INSTALLATION TIP



CAUTION OR IMPORTANT

USE BOLT SEALANT



Apply 3 to 4 small drops of bolt sealant onto the cleaned and degreased threads before tightening the bolts.

WARNING! Avoid contact with skin, eyes and mucous membranes. Do not inhale fumes. Keep out of reach of children.



USE ANTI-SEIZE LEAD-FREE COPPER PASTE (black tube)

Provides trouble-free and long-lasting protection against seizing, corrosion and rusting of bolts, threaded ends, nuts, joints, etc. Also protects against vibration, wear and impact.

WARNING! Avoid eye contact. Keep out of reach of children.



USE ANTI-SEIZING GREASE (white tube)

Prevents seizing, corrosion and excessive wear between the titanium components of your exhaust system.

WARNING! Avoid eye contact. Keep out of reach of children.

Tools & equipment

- · T-handle 8 mm wrench
- T-handle 10 mm wrench
- · T-handle 12 mm wrench
- T-handle 10 mm swiveling wrench
- · T-handle 12 mm swiveling wrench
- · T-handle 4 mm three hexagon key wrench
- T-handle 5 mm three hexagon key wrench
- · Combination 8 mm wrench
- · Combination 8 mm wrench
- · Combination 15 mm wrench
- Spring puller

PARTS LIST

The following parts should be found in the box:

- Installation Manual
- Homologation certificate/ compliance documents if applicable
- Warranty
- Fitting material
- Muffler and pipes

Detailed list of parts can be found on the Akrapovič website (please use the QR code on the front page or look for "Schematic view" in the respective product page on www.akrapovic.com).

REMOVAL OF STOCK EXHAUST SYSTEM:

The process of uninstalling the original exhaust system may vary depending on the existing exhaust system. Please follow the original exhaust system manufacturer's instructions for uninstalling the original exhaust system.

If you for any reason decide otherwise, please note that any information provided in this respect herein should be considered as general information provided for your convenience only. Akrapovič shall not assume any liability or responsibility with regard to uninstalling your existing exhaust system, warranty coverage of such exhaust system or vehicle or their further fitness for use.

In case your Akrapovič exhaust system may not be used on certain roads or under certain conditions, please keep the stock or other exhaust system that you can use in such circumstances legally.




REMOVAL OF STOCK EXHAUST SYSTEM:

- 1. Put the motorcycle on a side stand, we recommend a racing stand. Make sure, that surface is solid and flat.
- 2. Unscrew and remove the fuel tank side panels and rider's seat (F 01).
- CAUTION: be careful not to injure yourself or damage any part of the motorcycle during this procedure!




- 3. Slide the rubber protection off the cable adjuster(s), loosen the nuts and shorten the adjuster(s) (F 02, 03).
- IMPORTANT: measure or mark the distance on both adjusters so you can adjust them after installation of Akrapovic exhaust system!




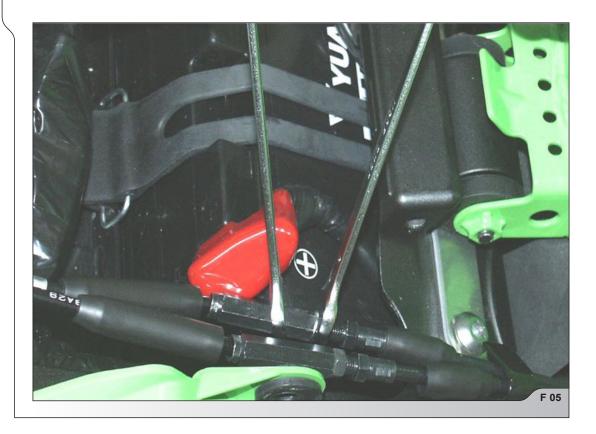

- 4. For OPEN SLIP-ON only: remove the safety pin and cables from the exhaust valve servo motor (F 04, 05).
- IMPORTANT: do not turn the servo motor wheel with force (only by ignition key switching!) or the servo motor could be damaged!
- IMPORTANT: do not remove or disconnect the servo motor!

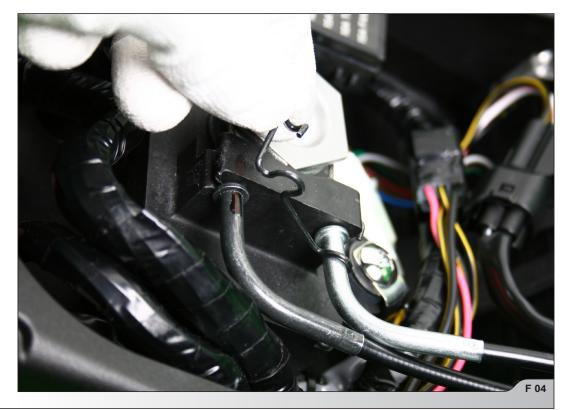



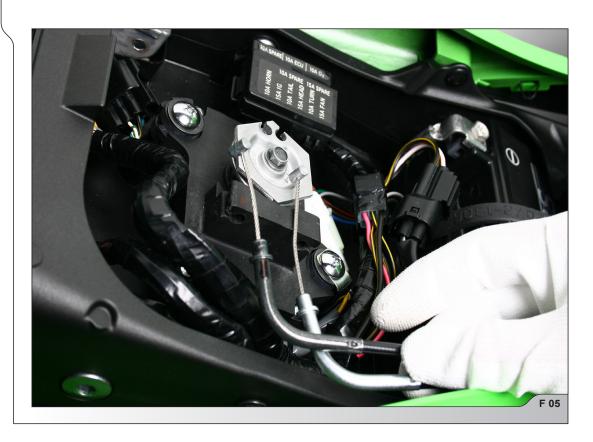

5. Unscrew the bolts and remove the stock heat shield (F 06, 07).





For HOMOLOGATED SLIP-ON only: unscrew the nuts and remove both cables from the stock exhaust valve (F 08, 09).







- 7. Unscrew the bolt from the metal clamp at the muffler catalytic converter box joint and muffler sub-frame bracket and remove the stock muffler (F 10, 11, 12).
- IMPORTANT: before removing, mark the cables, so they can't be swapped!









- 8. For OPEN SLIP-ON only: unscrew the bolt from the metal clamp at the muffler catalytic converter box joint and muffler sub-frame bracket. Remove the muffler together with exhaust valve cables (F 13, 14, 15).
- IMPORTANT: be careful not to damage the cables or any other part of the motorcycle during removal!









9. For OPTIONAL LINK PIPE only: unscrew and remove the stock heat shield (F 16, 17, 18, 19).








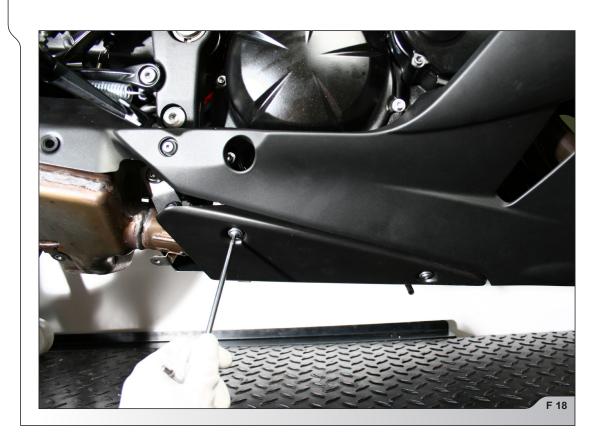

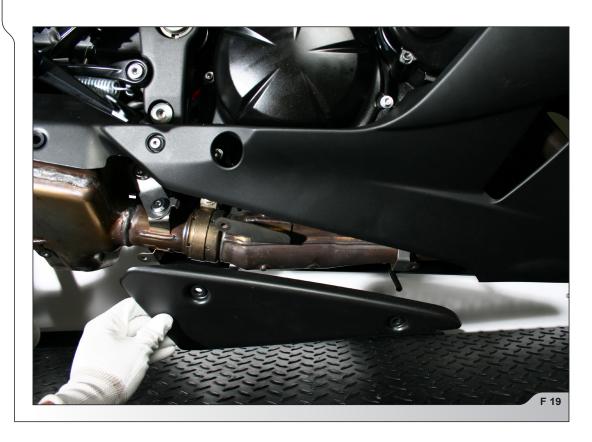

10. For OPTIONAL LINK PIPE only: unscrew and remove the lower part of the cowling (F 20, 21, 22, 23, 24, 25).

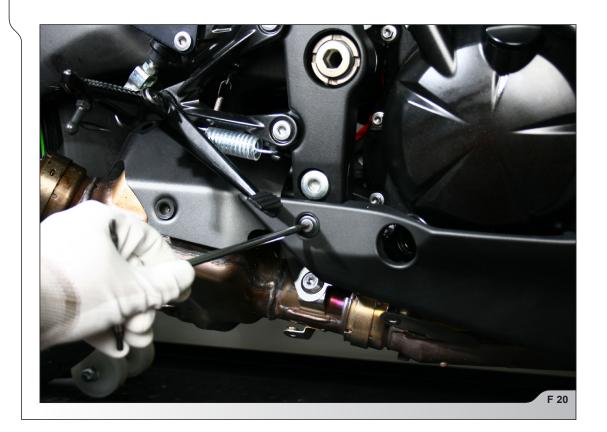











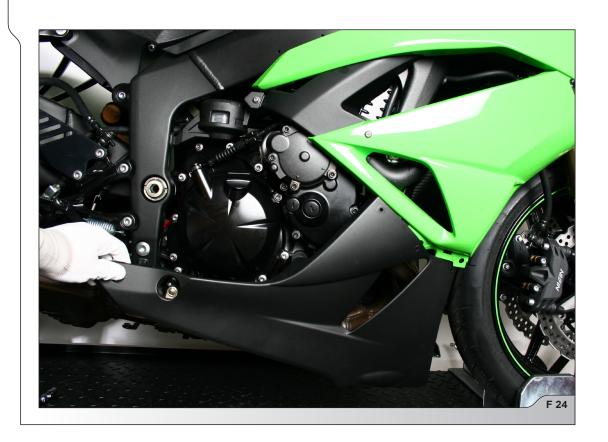




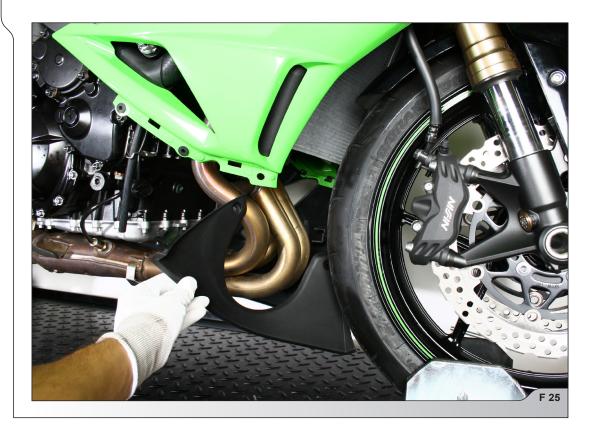

- 11. For OPTIONAL LINK PIPE only: loosen up the nuts of the header tube flanges so that you can remove the catalytic converter box (F 26).
- ! IMPORTANT: make sure not to damage the cooling fins of the water cooler or any other part of the motor-cycle!




12. For OPTIONAL LINK PIPE only: unscrew the bolt from the metal clamp at the catalytic converter box - header tubes joint and catalytic converter box bracket (F 27, 28). Remove the catalytic converter box.

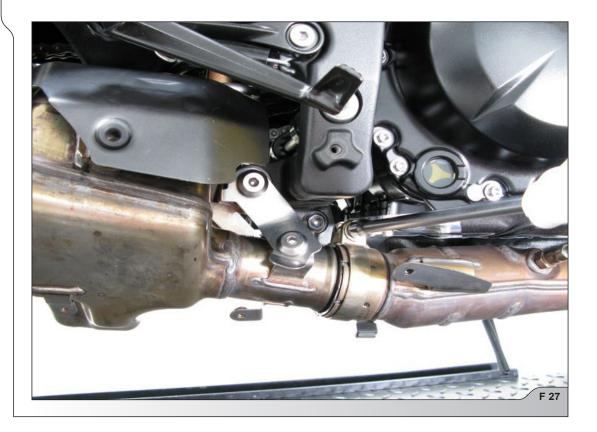



INSTALLATION OF THE AKRAPOVIC SLIP-ON EXHAUST SYSTEM:

1. For OPTIONAL LINK PIPE only: remove stock graphite gasket from stock collector and replace it with Akrapovic graphite gasket (F 29).

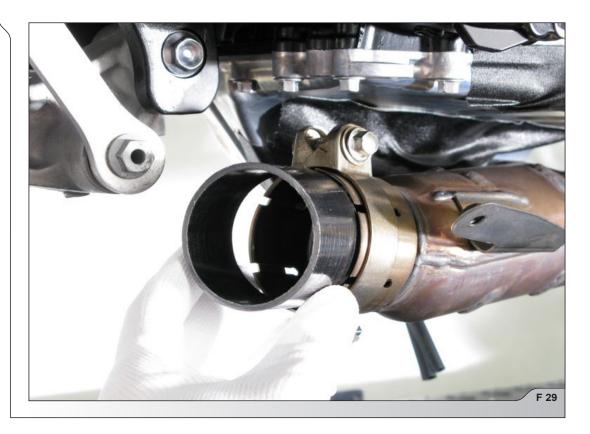


2. Coat the bolt and interior side of the metal clamp with Akrapovic anti-seize lead-free copper paste (black tube) and correctly install the metal clamp and second graphite gasket into the link pipe (F 30, 31).






3. For OPTIONAL LINK PIPE only: slide the optional link pipe onto the stock collector and tighten the bolt of the link pipe bracket using stock bolt with Akrapovic nut and washer. Tighten the stock metal clamp of link pipe/collector joint (F 32, 33, 34, 35).

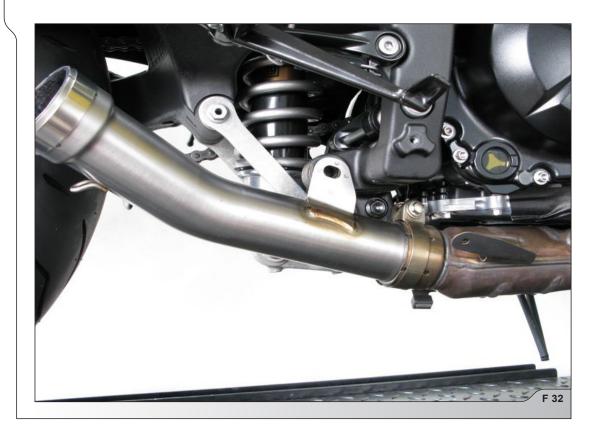






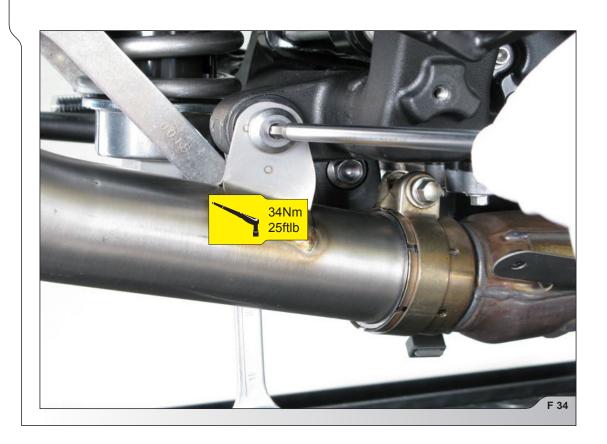



4. Reinstall the lower part of the cowling (F 36). Check vehicle manufacturer manual for tightening torques (for dismounted stock parts).

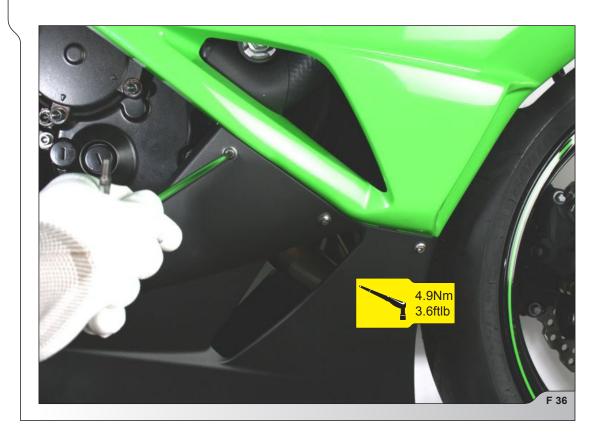





5. Remove stock graphite gasket and replace it with Akrapovic graphite gasket (F 37).




6. Unscrew and remove stock catalytic converter box heat shield (F 38, 39).

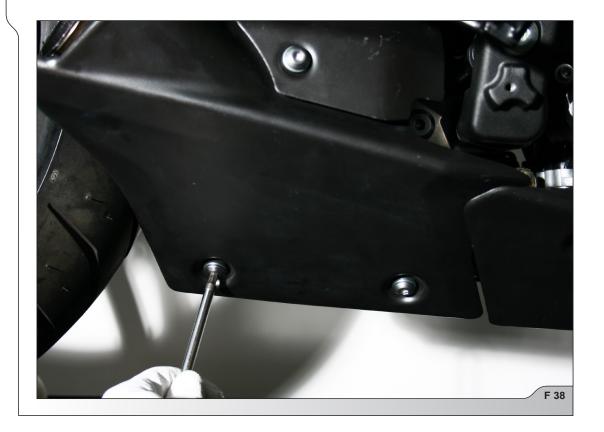


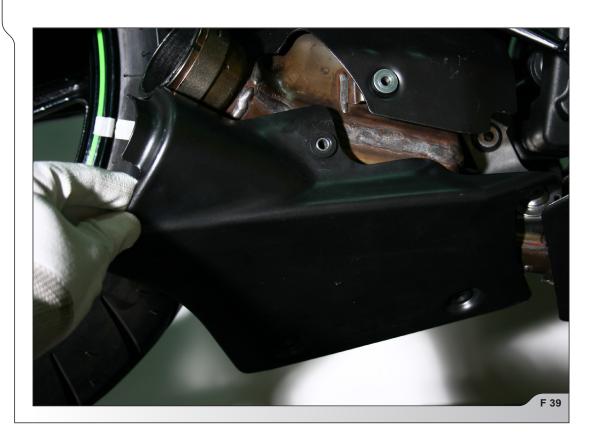

7. Correctly install Akrapovic metal clamp with spring hook (F 40, 41).

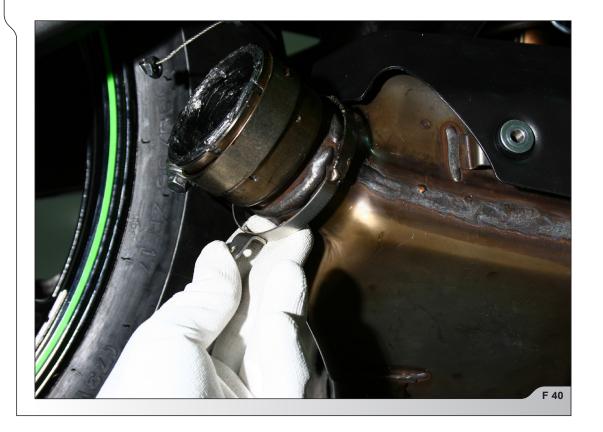



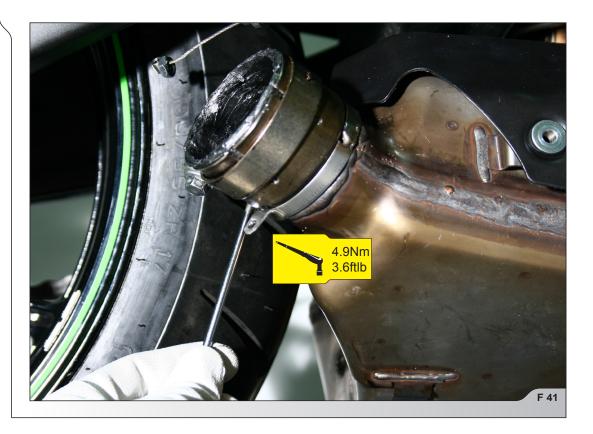

8. Reinstall the stock catalytic converter box heat shield (F 42).



- Correctly position the carbon-fiber clamp and slide it onto the muffler bear in mind the left offset of the carbon-fiber clamp viewed from the end of the muffler (position sticker saying TZ3 or CZ3 should be on the inner side of the muffler).
- ! IMPORTANT: open the clamp slightly wider than the diameter of the outer sleeve of the muffler do not scrape it along the muffler outer sleeve! (F 43, 44).








- 10. Position the muffler with welded link-pipe correctly, slide it into the outlet side of the catalytic converter box outlet and attach the spring (F 45, 46).
- IMPORTANT: be careful not to damage graphite gasket during this process!
- ! IMPORTANT: make sure, that spring pull the link pipe all the way into the outlet!






11. Attach and hand tighten the carbon-fiber clamp onto muffler bracket using bolt, nut and washer supplied in the Akrapovic kit as shown in figures (F 47, 48).



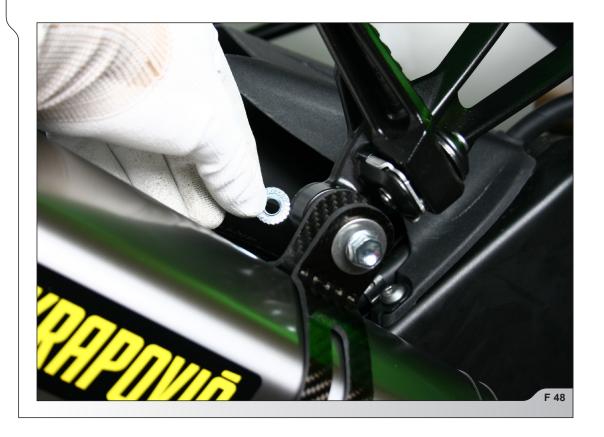


12. Align the muffler in respect to the motorcycle. Tighten the carbon-fiber clamp and metal clamp of link pipe/collector joint (F 49, 50).

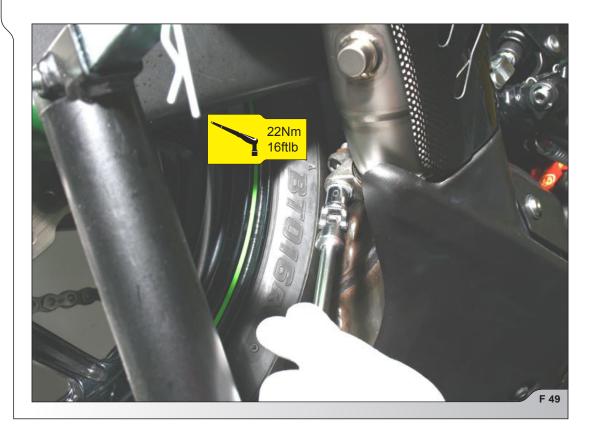




13. For OPTIONAL LINK PIPE only: tighten the metal clamp of muffler link pipe joint (**F 51**). Make sure that link pipe or muffler are not touching the swing arm or any other part of the motorcycle.

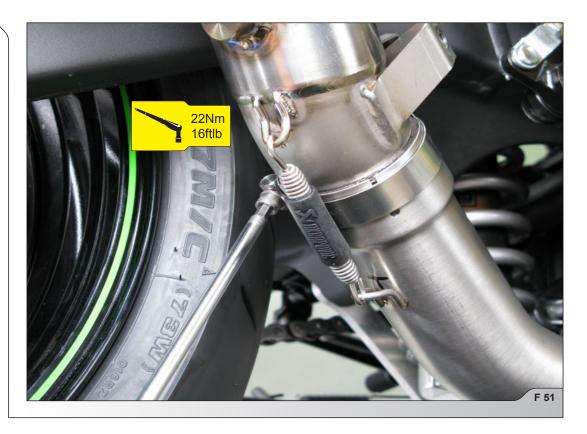

14. For HOMOLOGATED SLIP-ON only: reinstall the cables onto the Akrapovic exhaust valve in the reverse order from the order in which they were removed **(F 52, 53)**.

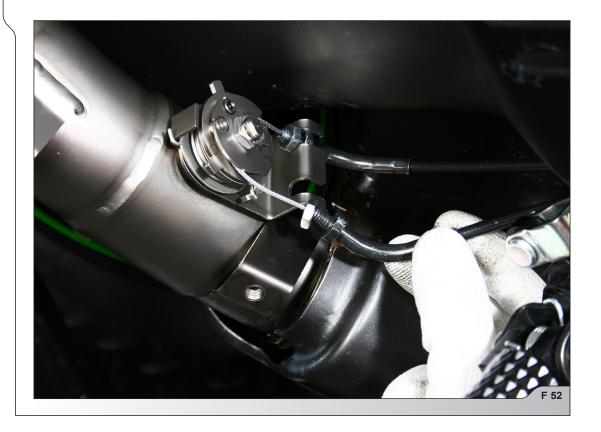







15. For HOMOLOGATED SLIP-ON only: adjust the cable adjusters to original position, tighten the nuts and slide the rubber protection over adjusters (F 54, 55, 56).



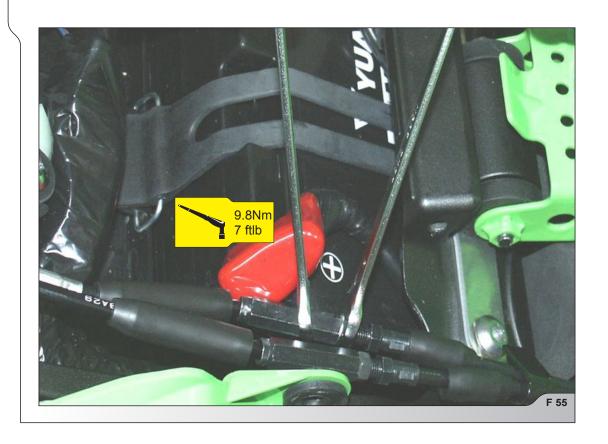


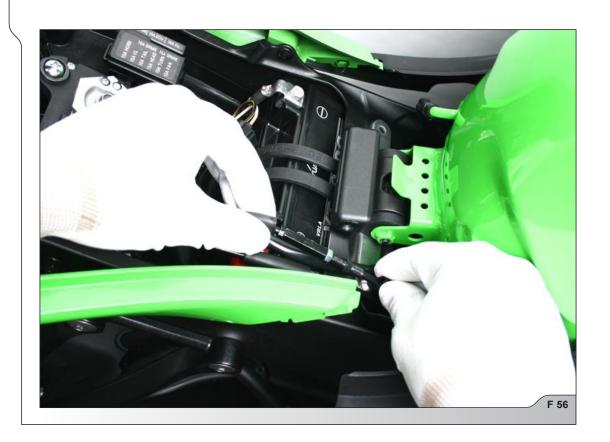


16. For HOMOLOGATED SLIP-ON only: Install the heat / distance washers correctly (F 57).



17. Correctly position and tighten the Akrapovic carbon-fiber heat shield valve protector onto the link pipe (F 58, 59).

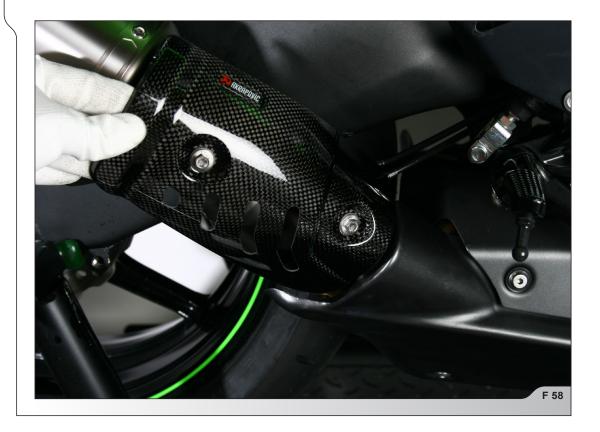

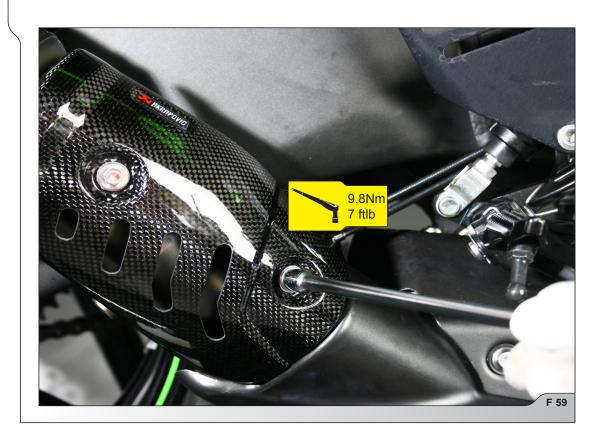

FINAL INSTALLATION AND MAINTENANCE:

Clean grease spots off all exhaust system surfaces, when installation is finished. Cleaning will prevent spots from burning onto the surface. Do not use aggressive chemical cleaners, because they can damage the surface or sticker.

- 1. Muffler titanium outer sleeve: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40[®] or equivalent)*.
- 2. Muffler carbon-fiber outer sleeve: use a soft dry cloth sprayed with all purpose foam cleaner, then wipe with a soft dry cloth.
- 3. Muffler carbon-fiber outlet cap: use a soft dry cloth sprayed with all purpose foam cleaner, then wipe with a soft dry cloth.
- 4. Painted mufflers and parts use a soft cloth sprayed with all purpose foam cleaner, then wipe with a soft dry cloth.
- 5. Chrome plated mufflers and parts: use a soft cloth sprayed with all purpose foam cleaner, then wipe with a soft dry cloth.
- 6. Stainless steel pipes: use a soft cloth sprayed with a contact cleaner, then wipe with a soft dry cloth.
- 7. Titanium pipes: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40[®] or equivalent)*.

Periodically make sure all the bolts and springs are sufficiently tight.

- IMPORTANT: make sure all the bolts are sufficiently tightened. In case the exhaust system touches the cowling or other parts repeat the adjustment of the exhaust system or contact your authorized dealer!
- CAUTION: after running engine for 30 minutes, retighten the bolts of the Akrapovič carbon-fiber heat shield!
- INSTALLATION TIP: IT IS NORMAL IF WHITE SMOKE COMES OUT OF THE MUFFLER DURING THE FIRST 100 KM AFTER REPLACEMENT.
- INSTALLATION TIP: A CHANGE IN THE COLOR OF THE EXHAUST SYSTEM IS NORMAL DUE TO THE HIGH TEMPERATURES.
- CAUTION: DO NOT STAND BEHIND THE MUFFLER AT ANY TIME.
- IMPORTANT: DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN AKRAPOVIČ EXHAUST SYSTEMS.

^{*}WD-40[®] is a trademark of the WD-40 Company.

TROUBLESHOOTING:

Problem	Possible cause	Solution
Exhaust gas leaks out of the muffler/pipe clamp connections	loosened clamp	tighten the clamp to specified torque
	connection is not completely joined	tap the connection into place and tighten the clamp to specified torque



