


## Installation Instructions

### 60-0502R Triumph 675 Crank Case Cover

- 1) Attach the skid plate to the Woodcraft cover by bolting it from the inside. **IMPORTANT - USE THREADLOCKING COMPOUND** on the skid plate mounting bolts. Coat the threads completely and allow the threadlocking compound to fully set before use
- 2) Remove the stock cover and clean the gasket surface of the engine.
- 3) Install the Woodcraft cover with a new gasket using the OEM bolts
- 4) Start the motorcycle and inspect for any leaks before riding.

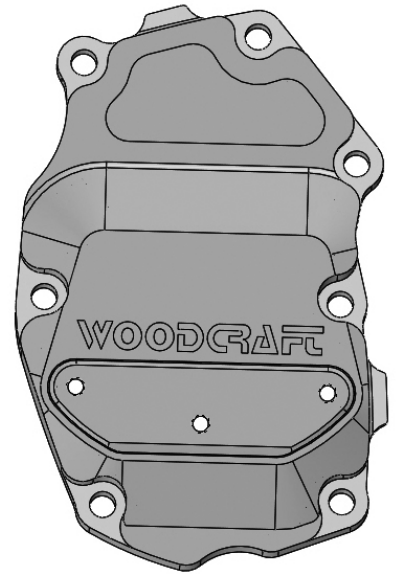


### WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. **FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.**

## Installation Instructions

### 60-0502R Triumph 675 Crank Case Cover

- 1) Attach the skid plate to the Woodcraft cover by bolting it from the inside. **IMPORTANT - USE THREADLOCKING COMPOUND** on the skid plate mounting bolts. Coat the threads completely and allow the threadlocking compound to fully set before use
- 2) Remove the stock cover and clean the gasket surface of the engine.
- 3) Install the Woodcraft cover with a new gasket using the OEM bolts
- 4) Start the motorcycle and inspect for any leaks before riding.

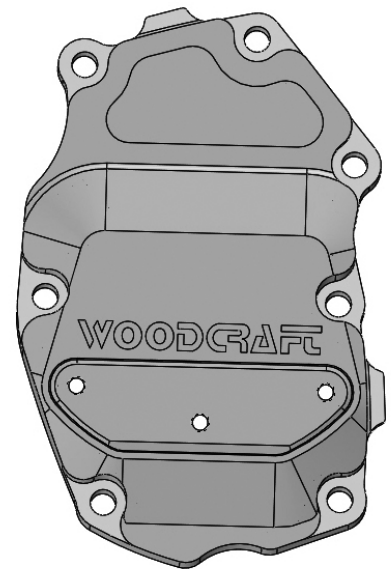

### WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. **FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.**