



Congratulations, you have purchased the finest exhaust system for your motorcycle on the market. Your Vance & Hines exhaust system is designed and crafted for maximum performance, a perfect fit, a great sound and unbeatable style. Please follow the installation instructions below and if you have any questions, please call our technical support line at (562) 926-5291.

Attention installer (if other than owner), please forward this instruction sheet to the owner of this product. These instructions contain valuable information to the end user.

BEFORE YOU BEGIN

- Make sure your bike is on a flat and stable surface before beginning this install.
- Before you start work make sure you have protective clothes and eyewear.
- You will need the following tools to perform the installation:
 - 10 & 12mm sockets and ratchet
 - 10 & 12mm combination wrenches
 - 4 and 5mm Allen wrench

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

STOCK EXHAUST SYSTEM REMOVAL

1. Remove the exhaust valve cable cover. (save all hardware for re-use) **(Figure 1.)**
2. Loosen the OE exhaust retaining clamp and remove the muffler bracket mounting bolt, nut and washer (save these for re-use), and remove the muffler body. **(Figure 2.)**
3. The original muffler clamp, exhaust gasket and muffler body are not needed for the rest of the Urban Brawler installation. Please set these parts aside.

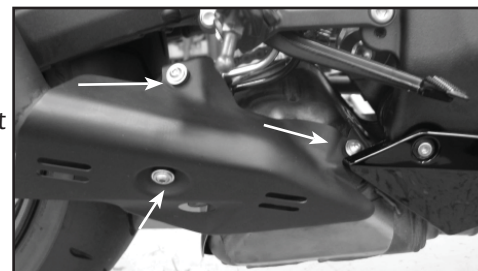


FIGURE 1

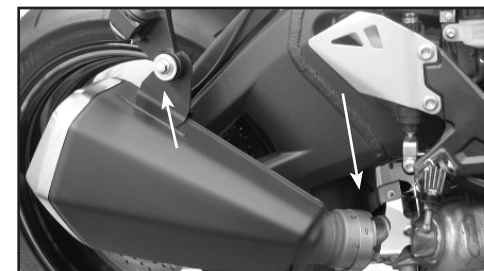


FIGURE 2

VANCE & HINES OPTIONAL ACCESSORIES

FUELPAK



Take the guess work out of fuel injection with Fuelpak Fuel Management. Visit fuelpakfi.com for more information and to find out if your application is supported. Contact your local dealer or call (562) 921-0071 to order. Fuelpak is intended for racing or off-highway use only, and is not legal for sale or use in California on pollution-controlled vehicles.

SPARE PARTS & ACCESSORIES

- 1) Quiet Insert Kit #26528 - Sound Inserts (PAIR)

FIGURE 3



FIGURE 4



FIGURE 5

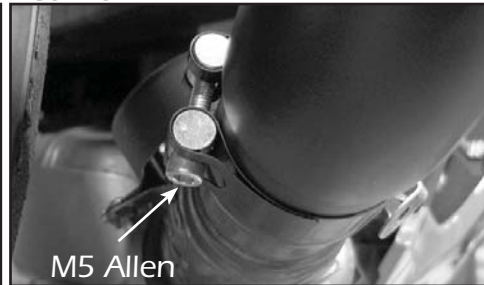


FIGURE 6




1. Slide the Urban Brawler and (supplied) barrel bolt clamp onto the collector outlet, using care. Bolt head should be facing down for access. **(Figure 3.)**
2. Rotate the Urban Brawler so that the bracket aligns with the inside of the rear footpeg mounting hole. Re-use the OE muffler mounting bolt/nut/washer through the bracket, tighten finger tight. **(Figure 4.)**
3. Tighten the (supplied) barrel bolt clamp and the Urban Brawler bracket mounting bolt to factory specs. **(Figure 4 & 5.)**
4. Position the OE heat shield as shown and fasten securely. **(Figure 6.)**
5. After installation and before starting your motorcycle, completely clean pipes and heat shields with warm soapy water and a clean soft cloth. Dry with a clean towel.

NOTE: any residue, oil, or fingerprints will stain the finish. Do NOT use anything abrasive to clean the pipes as it may remove the finish.

6. Be sure to tighten all hardware before starting motorcycle.

PACKING LIST

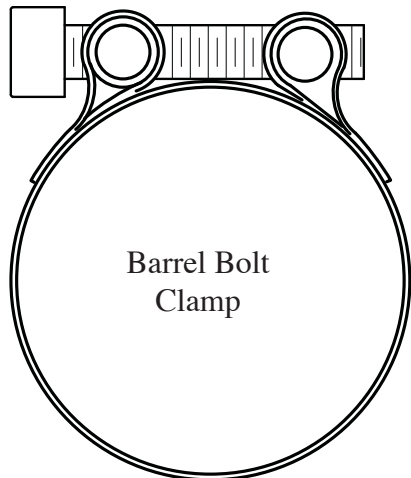

Barrel Bolt Clamp

WARRANTY

All of our exhaust systems are warranted against defects in material and/or workmanship for a period of 90 days. This warranty shall be limited to the repair or replacement of the system, which may be proven defective under normal use. We will not warranty any system that has been abused, misused, improperly installed, or modified. Failure to follow muffler packing instructions and maintenance will also not be covered under warranty.