

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com





www.puig.tv - www.puigusa.com

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

CARENABRÍS ADAPTABLE A – WINDSHIELD FOR – SCHEIBE FÜR

### KTM 1290 SUPERDUKE R

Ref.: 7014

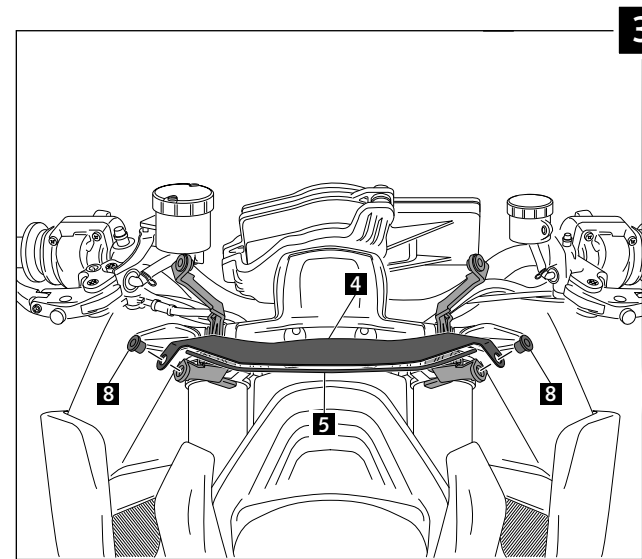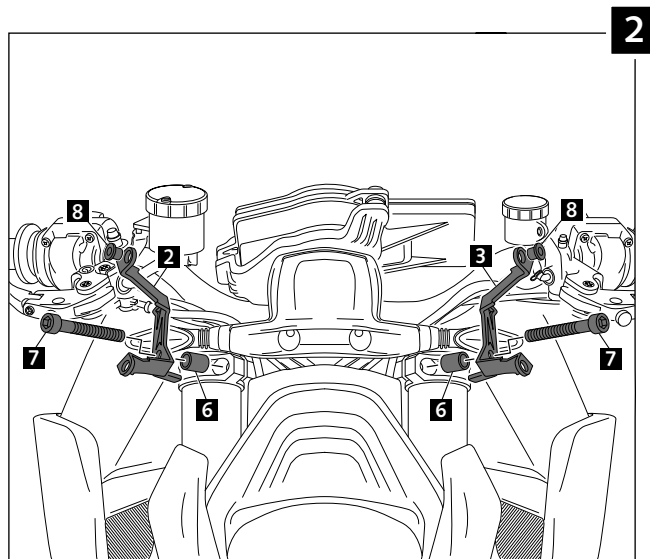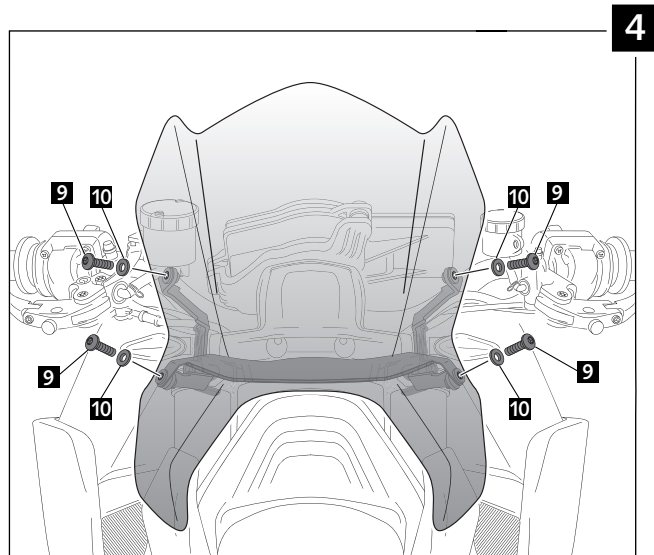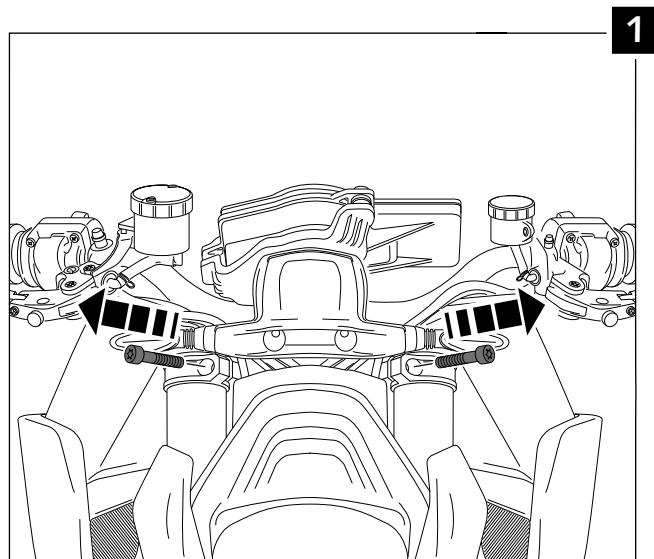

ID.	DESCRIPCIÓN	DESCRIPTION	QTY.
1	 Carenabrís	Windshield	1
2	 Soporte metálico derecho	Right metal support	1
3	 Soporte metálico izquierdo	Left metal support	1
4	 Visera Anti-reflectante	Anti-reflect Visor	1
5	 Ribete negro longitud 250mm, espesor 1mm (se suministra montado en la pieza nº4)	Black Trim length 250mm, 1mm thickness (supplied already mounted on the piece nº4)	1
6	 Casquillo Ø int. 8,5 x Ø ext. 14x20	Ø inner 8,5 x Ø outer 14x20 arrowhead	2
7	 Tornillo Allen DIN 912 M8x55	M8x55 Allen screw DIN 912	2
8	 Silemblock M5	M5 Silemblock	4
9	 Tornillo Allen M5x16 ISO 7380	M5x16 ISO 7380 Allen screw	4
10	 Arandela nylon M5x0,5	M5x0,5 nylon washer	4