




SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2T

REMOVE THE SEATS.

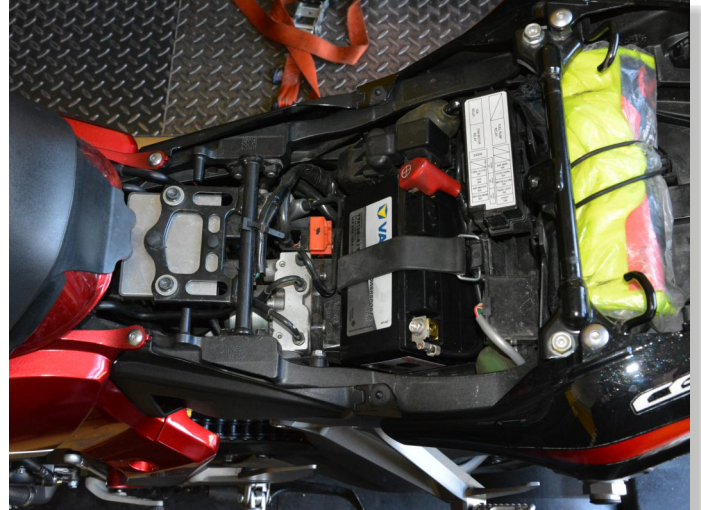

REMOVE THE FRAME COVERS
BELOW THE FUEL TANK.



LIFT UP OR REMOVE
THE FUEL TANK.



Honda CB1000R

2008-2014



**TAKE OFF THE BLACK/WHITE
TERMINAL FROM ONE COIL.**

**CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.**


**CONNECT THE BLACK/WHITE
TERMINAL TO THE QSH RED WIRE
TERMINAL AND SECURE WITH TAPE.**



**TAKE OFF THE BLACK/WHITE
TERMINAL FROM THE 2ND COIL.**

**CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.**

**ISOLATE THE UNUSED BLACK/WHITE
TERMINAL WITH TAPE.**

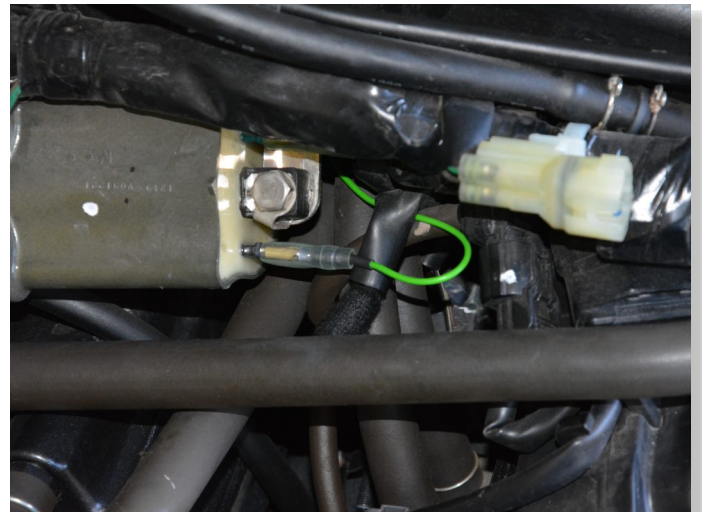

**SPLICE THE QSH WHITE WIRE TO
THE YELLOW/BLUE WIRE OF THE
COIL BY USING THE SUPPLIED
RED WIRE TAP CONNECTOR.
(REFER TO THE QSH-P2T INSTRUCTIONS)**




Honda CB1000R

2008-2014




**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**

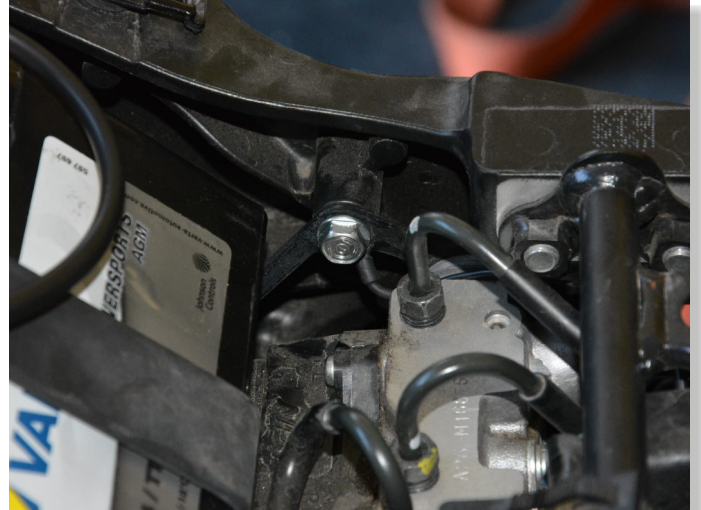

MOUNT THE QSE SENSOR.
(PLACE THE SENSOR IN THE ROD AS SHOWN.
USE THE WASHERS SUPPLIED
AT BOTH SIDES OF THE SENSOR.
TIGHTEN THE NUT BY HAND FULLY
AND THEN BY A 1/4 TURN USING A WRENCH.

**WE RECOMMEND USING
LOCTITE THREADLOCKER (GLUE.)**

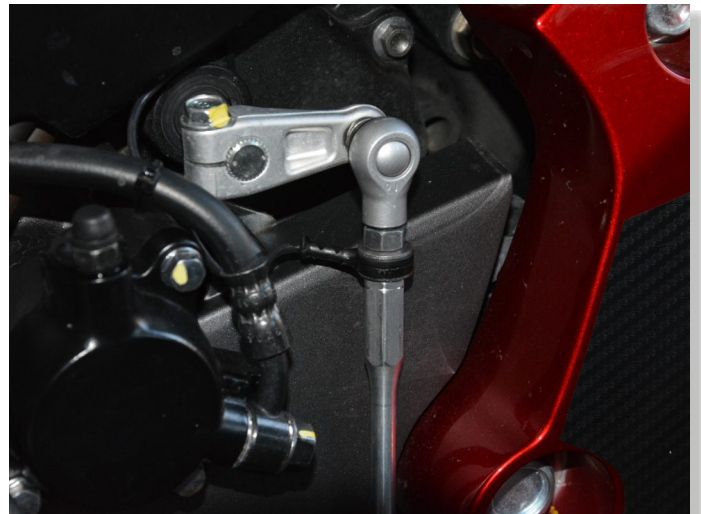

**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

