



SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4A

REMOVE THE SEAT.



REMOVE THE UPPER SIDE COVERS.





RELEASE THE SIDE COVERS.

QUICKSHIFTER EASY





LIFT UP OR REMOVE THE FUEL TANK.



REMOVE THE AIRBOX.




PLUG QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS. (BLACK, 2-POLE CONNECTORS BELOW AIRBOX)





CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

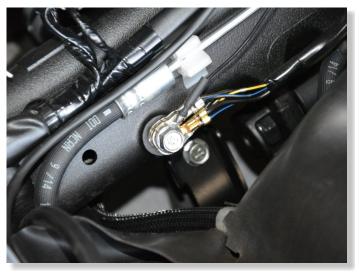



MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED. PLACE THE CONICAL WASHERS AT THE TWO SIDES OF THE SENSOR LIKE THIS: (D). TIGHTEN THE BOLT IN THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

> FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)



TYPICAL POSITION FOR THE

QUICKSHIFTER EASY.