





SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4A

REMOVE THE SEAT.

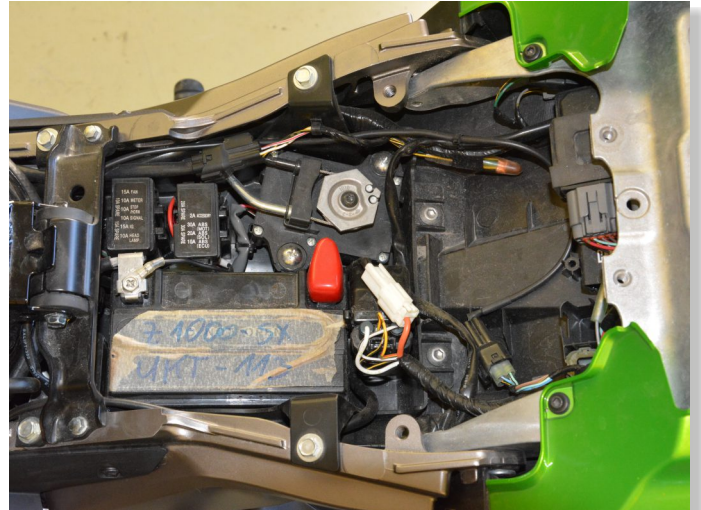

REMOVE THE FUEL TANK.

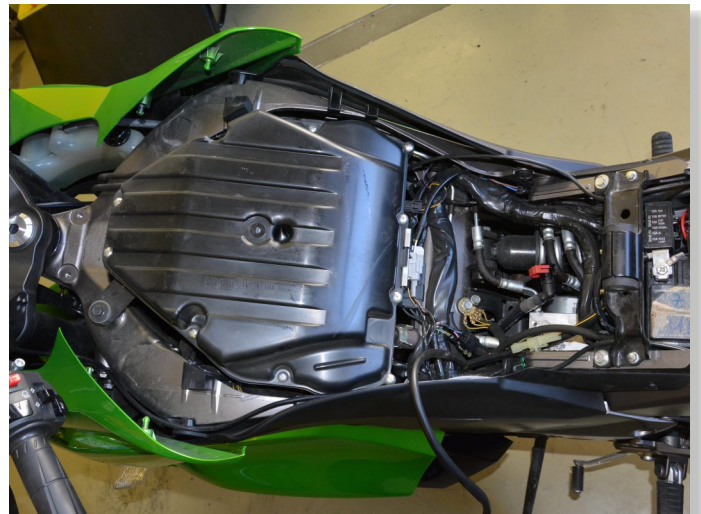

REMOVE THE
SMALL COVER FROM THE
LEFT SIDE BELOW FRAME.




Kawasaki Z1000SX

2011-2013



REMOVE THE AIRBOX.

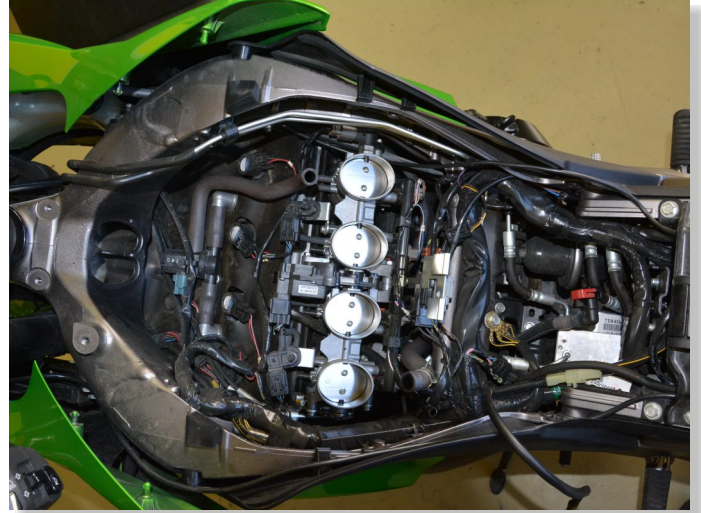

**PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.**
(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)



**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**



Kawasaki Z1000SX


2011-2013



MOUNT THE QSE SENSOR.

(PLACE THE SENSOR IN THE SHIFT ROD AS SHOWN.
USE THE WASHERS SUPPLIED
AT BOTH SIDES OF THE SENSOR.
TIGHTEN THE NUT BY HAND FULLY
AND THEN BY A 1/3 TURN USING A WRENCH.
THIS CORRESPONDS TO ABOUT 3-4 NM.

WE RECOMMEND USING LOCTITE THREADLOCKER
GLUE AT THE LOCKNUTS.)

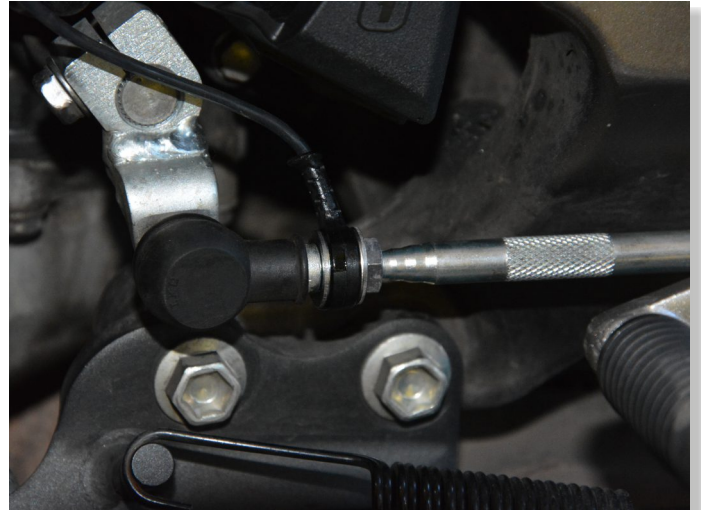

TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.

