

SUPPLEMENTARY MANUAL

for QSE-1 + QSX-P4B

REMOVE THE SEATS.



REMOVE THE REAR FAIRING FROM LEFT SIDE.

REMOVE THE FUEL TANK.







FTER EASY


l




REMOVE THE AIRBOX.



PLUG QSX CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS. (BLACK, 2-POLE CONNECTORS BELOW AIRBOX)

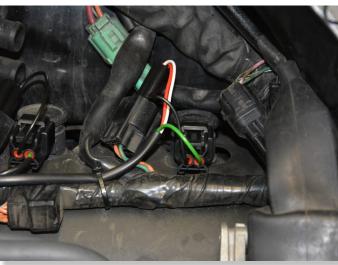

MOUNT THE QSX MODULE TO THE INNER SIDE OF THE FRAME BY THE SUPPLIED VELCRO STRIPS, AND SECURE THE CABLES WITH CABLE TIES. (Avoid direct contact with heat sources, Like the cylinder head.)

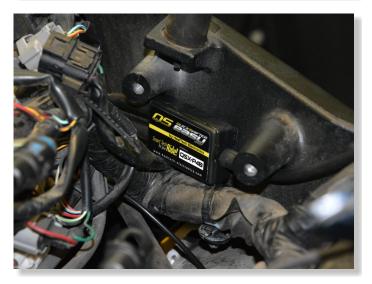





CONNECT QSX BLACK WIRE TERMINAL TO CHASSIS GROUND.





MOUNT THE QSE SENSOR.

(PLACE THE SENSOR IN THE ROD AS SHOWN. Use the washers supplied at both sides of the sensor. Tighten the nut by hand fully and then by a 1/4 turn using a wrench.

WE RECOMMEND USING LOCTITE THREADLOCKER GLUE.)

TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

