



401 South Grand Ave., Santa Ana, CA 92705  
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



## 2011 Kawasaki ZX-10R

V.A.L.E.™ Slip-on Exhaust System with M-2 Canister  
Part # 005-2990406V2, 005-2990407V2, 005-2990408V2



### Parts List

Qty.	Description	Part Number
1	Muffer Canister	Varies
1	Slip-on Tube	005-29904SV2
1	HARDWARE KIT	005-299-4
1	X-Ring	005-7-2-2
1	Barrel Clamp	005-27-66MSH
4	6x20mm Socket Head Cap Screw	005-SH620
4	6mm Split Lock Washer	005-WL6
1	5mm Long Handle Ball End Hex Wrench	005-9-18610
1	T20 Torx Screw Hex Wrench	005-9-15820
1	TBR Sticker Kit	015-10212


### IMPORTANT - PLEASE READ CAREFULLY

*This exhaust system has not been tested with aftermarket or OEM accessories and is not designed to work with them. (i.e. hard bags/ centerstand/ lisc. plate frames)*

*We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a centerstand or ideally a service lift during installation. Be sure to save all stock components for possible use later.*

### Installation Instructions

1. Make sure the bike is completely cool before starting the installation. Make sure the bike is secure on a centerstand or ideally a service lift.
2. Remove OEM exhaust muffler only.

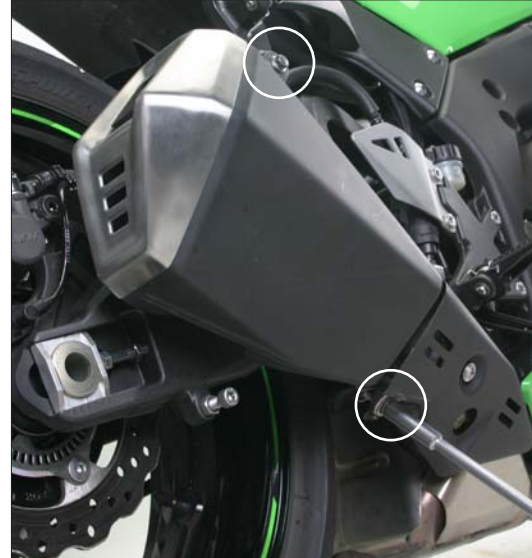

3. Attach TBR muffer to slip-on tube using the 4 6x20mm S.H.C.S. and lock washers provided. Leave loose for now. Slide rubber lined muffler clamp over muffler.



4. Slide supplied barrel clamp on end of slip tube where it will meet OEM headpipe.
5. Install the TBR muffer assembly and attach using OEM mounting hardware.



6. Check alignment and tighten muffler and the 4 6x20mm V.A.L.E.™ S.H.C.S.



7. Tighten barrel clamp.



8. Double check all your work.
9. Before you run the bike, clean off all fingerprints and dirt, as any oily residue will etch the metal and become somewhat permanent when the system gets hot. Also, remove any plastic film from the name badge(s) and or canister clamp(s). Run the bike and enjoy. It is normal for some white smoke to appear the first time you start the bike. This is packing/manufacturing oil from inside the pipe burning off. Check for gaps or leaks. If you find a leak, a little high temperature silicon sealant should fix it. After 50 to 100 miles, recheck all fasteners for tightness.



401 South Grand Ave., Santa Ana, CA 92705  
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



## 2011 Kawasaki ZX-10R

V.A.L.E.™ Slip-on Exhaust System with M-2 Canister  
Part # 005-2990406V2, 005-2990407V2, 005-2990408V2



Qty.	Description	Part Number
1	Muffler Canister	Varies
1	Slip-on Tube	005-29904SV2
1	HARDWARE KIT	005-299-4
2	X-Ring (half)	005-7-2-3
1	Barrel Clamp	005-27-66MSH
4	6x20mm Socket Head Cap Screw	005-SH620
4	6mm Split Lock Washer	005-WL6
1	5mm Long Handle Ball End Hex Wrench	005-9-18610
1	T20 Torx Screw Hex Wrench	005-9-15820
1	TBR Sticker Kit	015-10212

### Warranty

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.



### Care & Cleaning

#### Care & Cleaning

Keep system free of dirt and moisture. Store in a cool, dry place. Make sure vehicle is completely cool before maintenance.

**Stainless Header System:** Polished stainless steel pipes will turn a light golden hue after a few heat cycles, this is a normal characteristic of high quality stainless steel. Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

**Titanium Header System:** Polished titanium pipes will experience color shift ranging from deep blue/purple through amber after a few heat cycles. This is a normal characteristic of high quality titanium. Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

**Polished Aluminum Canisters:** Use an aluminum or mag wheel polish to restore the bright finish to factory spec.

**Brushed Aluminum Canisters:** Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

**Carbon Fiber Canisters:** Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth. Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the carbon fiber sleeve. TBR sells repack kits (Road - #005-10038, Offroad - #005-10038MX) that include everything you need to easily do it yourself.

**Titanium Mufflers:** For cleaning use a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth. Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the carbon fiber sleeve. TBR sells repack kits (Road - #005-10038, Offroad - #005-10038MX) that include everything you need to easily do it yourself.

Repack all road canisters at the first signs of packing material deterioration. Part #005-10038  
Repack all offroad canisters after every 10 hours of use. Part #005-10038MX

**NEVER** dyno test your bike with carbon fiber or titanium canisters installed - the intense heat and lack of cooling air can quickly burn through the canister material. Two Brothers Racing does not provide a warranty for burned canisters.