




Installation Instructions

60-0335/7/8L Ignition Cover Instructions

1) Remove the OEM cover from the motor and unbolt the stator assembly. Clean all OEM bolts and clips for re-installation.

2) Attach the skid plate to the Woodcraft cover by bolting it from the inside. Each bolt should have an o-ring (supplied) on it before assembly. The generic cover at the right shows both o-rings and washers on the skid plate bolts. If your skid plate did not come with washers, simply put the o-ring directly beneath the head of the bolt.

Important: Completely coat all skid plate bolts with Blue threadlocking compound

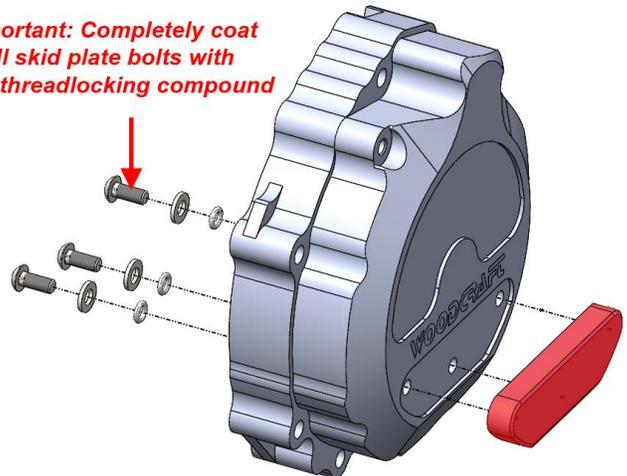

IMPORTANT - USE BLUE THREADLOCKING COMPOUND on the three skid plate mounting bolts. Completely coat the threads & allow time to cure before running!

3) Attach the pickup and wire retainer using the OEM hardware to the Woodcraft cover.

IMPORTANT - USE BLUE THREADLOCKING COMPOUND on all of the pickup / retainer mounting bolts and USE A QUALITY SILICONE SEALANT on both sides of the rubber plug for the stator wires (MANDATORY).

4) Completely clean the engine gasket surface. Your OEM cover does not utilize a gasket, and your Woodcraft cover will not use a gasket either. Apply a thin layer of semi-drying liquid gasket (**examples** - Yamabond 4, Hondabond 4, Permatex 29132) to the gasket and install the cover using the OEM hardware and tighten to OEM specifications (normally 8-9 ft lbs).

6) Start the motorcycle and inspect for any leaks before riding.

2005 + Only - You may need to bend the 90 degree locating tabs on the OEM fairing mount bracket straight for proper installation alignment.

WARNING

Installation of Woodcraft Billet Covers involve removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. **FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.**