

Note: Both the front and rear axle kits for this motorcycle are the same.

This kit contains all the parts for one axle. To equip both axles, you should purchase two kits.


- 1) Remove the stock axle from the motorcycle.
- 2) Slide OEM axle through the 45-0305FA base. **NOTE: the OEM washers are not re-used in this kit.** The axle slider bases replace the OEM washers. Install the OEM axle back through the forks (or the swingarm) and the wheel.
- 3) Slide the other 45-0305FA base over the threaded end of the axle and then install the OEM axle nut. Tighten the axle to factory OEM specification.
- 4) Install the plastic slider puck on the base and secure it using the FH 6mm bolt. The far side of the puck is undersized to help act as a locking mechanism for the bolt.



Front Axle



Rear Axle

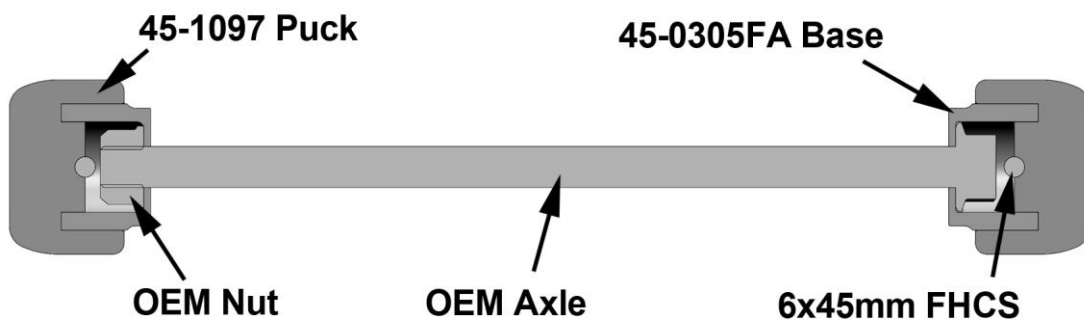

105 Baldwinville Rd, Winchendon, MA 01475

978-297-2977

WARNING: Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. The motorcycle should be run and thoroughly inspected before use. **DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. ALWAYS SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.**