



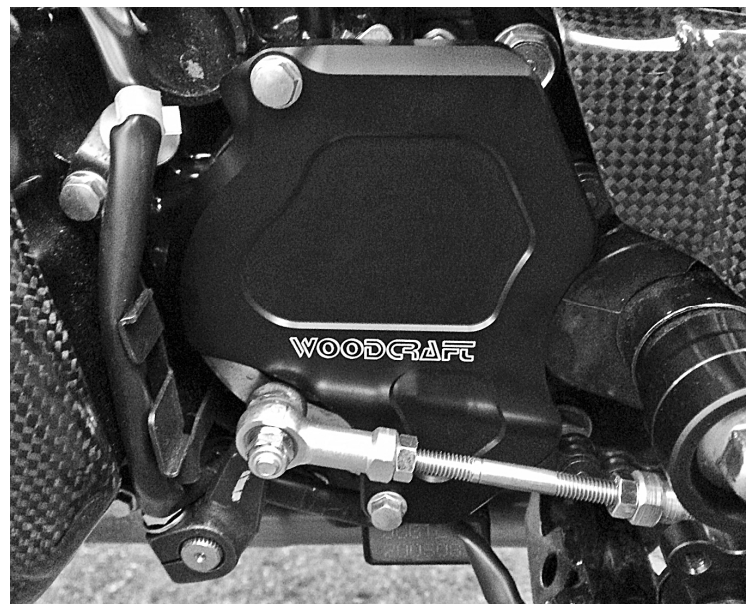

Installation Instructions

60-0305SC Grom Sprocket Cover

- 1) Remove the OEM sprocket cover
- 2) On the back side of the sprocket cover, there is a thin steel OEM case guard that is held on to the plastic cover with two plastic tabs. Remove this cover by simply pulling it off and deforming the tabs.
- 3) Install the Woodcraft sprocket cover using the OEM bolts. Important: place the OEM case guard between the Woodcraft sprocket cover and the engine as shown in the photo below.
- 4) Be sure to secure the wire for the kick stand switch so that it cannot get into the chain. It should be routed through the stock plastic guide in front of the cover and held in place with some zip ties if needed.

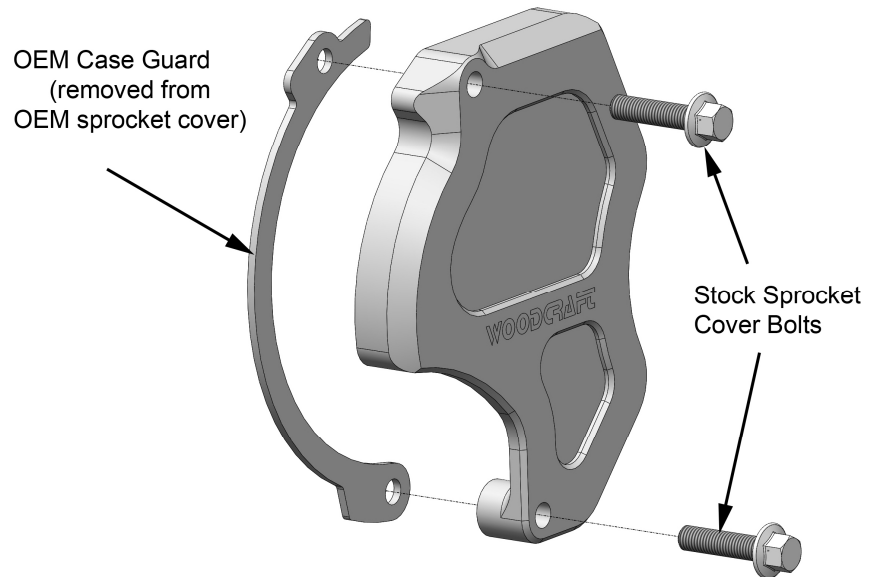

WARNING

Installation of Woodcraft Billet Covers involve removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.