


WOODCRAFT

*60-0147RI
Kawasaki ZX6R
Cover Protector
Installation Instructions*

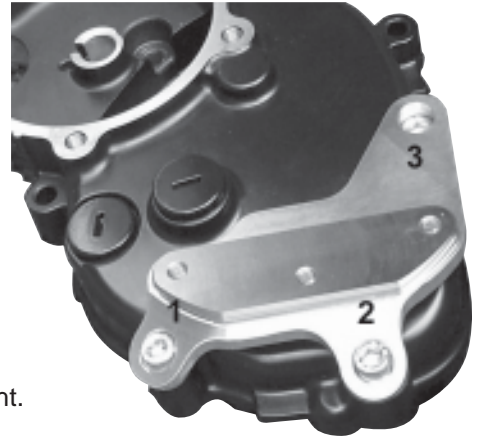

1) Remove the three bolts from the OEM cover as shown in the diagram at the right.

2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS


3) Install the Woodcraft cover with the included Woodcraft mounting hardware.

IMPORTANT - The OEM mounting bracket at bolt number 3 is retained

4) Re-fit the bodywork and trim as needed for skid pad clearance (not all bodywork requires modification).

WOODCRAFT

*60-0147RI
Kawasaki ZX6R
Cover Protector
Installation Instructions*

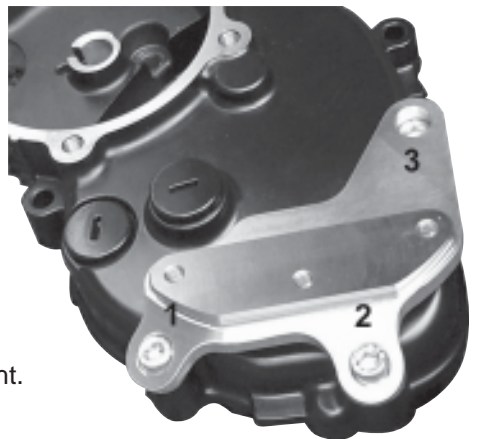

1) Remove the three bolts from the OEM cover as shown in the diagram at the right.

2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS

3) Install the Woodcraft cover with the included Woodcraft mounting hardware.

IMPORTANT - The OEM mounting bracket at bolt number 3 is retained

4) Re-fit the bodywork and trim as needed for skid pad clearance (not all bodywork requires modification).