


- 1) Remove the three bolts from the OEM cover as shown in the diagram at the right.
- 2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

**IMPORTANT - USE  
THREADLOCKING COMPOUND  
ON THE THREE SKID PLATE  
MOUNTING BOLTS**

3) Adhere the 60-2500 rubber pad to the back side of cover protector.

4) Install the Woodcraft cover over the OEM Suzuki cover with the included Woodcraft mounting hardware. Torque should be set at about 7 ft-lbs.

5) Start the motorcycle and inspect for any leaks before riding

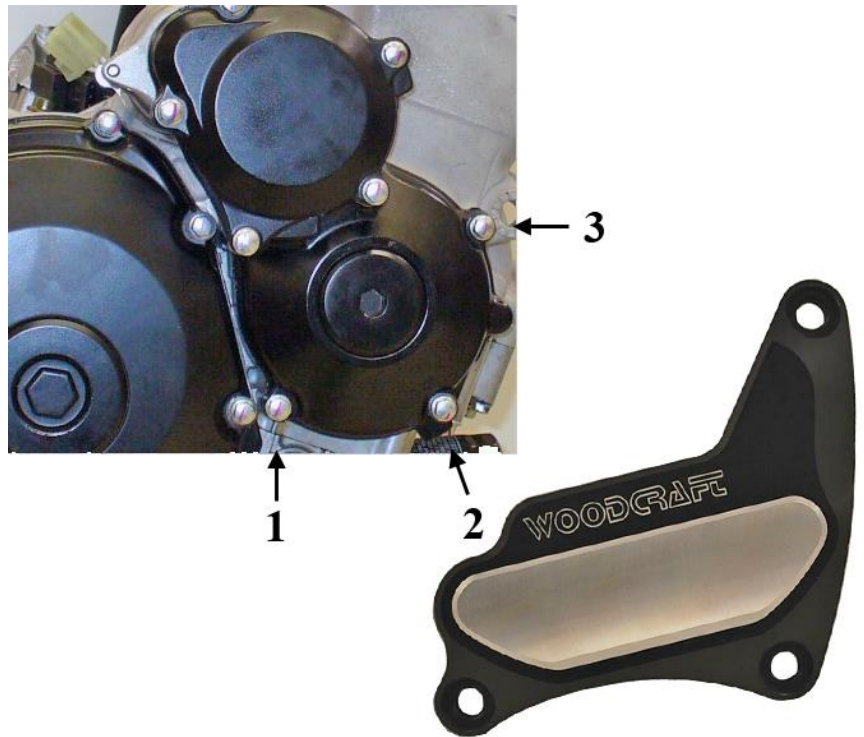

**WARNING**

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.