




for XT-SO1

REMOVE THE MAIN SEAT. REMOVE BLACK FRAME COVERS FROM LEFT AND RIGHT SIDE BELOW SEAT. REMOVE THE MAIN SEAT.

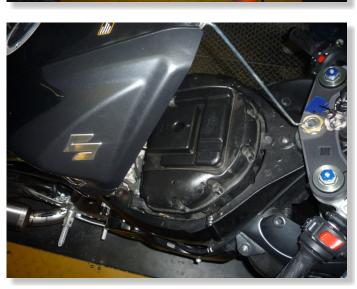





PLUG X-TRE CONNECTORS IN-LINE WITH THE GEAR POSITION SENSOR CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS BELOW THE FUEL TANK AT LEFT SIDE)

MOUNT THE X-TRE BOX TO THE INNER SIDE OF THE FRAME BY THE SUPPLIED VELCRO STRIPS, AND SECURE THE BOX AND CABLES WITH CABLE TIES.













CONNECTOR.

CONNECTOR.

SIDE.

(BLACK CONNECTOR, PIN #23)

WHICH GOES TO THE ECM

CUT THE BLACK/GREEN WIRE ABOUT 4 cm (1.6["]) AWAY FROM THE ECM

CONNECT THE X-TRE BLACK/GREEN WIRE TO BLACK/GREEN WIRE END,

CONNECT THE X-TRE BLACK/WHITE WIRE TO BLACK/GREEN WIRE END, WHICH IS AT THE WIRING HARNESS

