


 $5420 \; \text{DANIELS STREET STE A, CHINO CALIF. } 91786 \cdot (800) \\ 634-9166 \cdot (909) \\ 628-4722 \cdot \text{FACSIMILE } (909) \\ 591-2198 \cdot (909) \\ 628-4722 \cdot \text{FACSIMILE } (909) \\ 648-4722 \cdot \text{FACSIMILE } (909)$

www.yoshimura-rd.com

BRAKE CLEVIS KIT 060HA244700

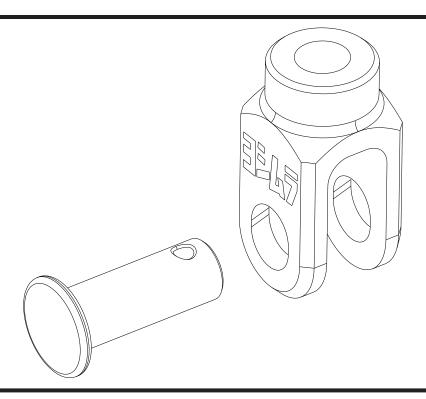

Part List:

DESCRIPTION	QTY	PART #
RMZ250 04-05 RR Brake Clevis	1	2180-801-B
RMZ250 04-05 Ti Clevis Pin	1	2180-801-P
Yoshimura *USA* Sticker	2	17020C

Caution: Engine and exhaust system can be extremely hot. Let motorcycle cool down before beginning installation.

Note: Read through all instructions before beginning installation.

Tools Needed:

12 mm wrench Pliers

Installation Steps:

- 1 Remove stock cotter pin, stock washer, and stock clevis pin. (See Fig. 1)
- 2 Loosen 12 mm nut. (See Fig. 2)
- 3 Remove stock brake clevis.
- 4 Install Yoshimura brake clevis.

Note: Line up brake clevis hole against brake lever hole.

5 Reinstall stock pin, stock washer, and stock cotter pin.

Note: Secure cotter pin by bending both ends. (See Fig. 3)

6 Tighten 12mm nut against Yoshimura brake clevis. (See Fig. 4)

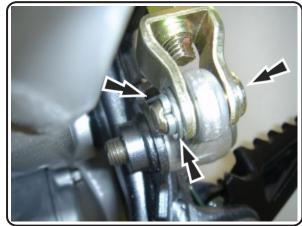


Fig. 1

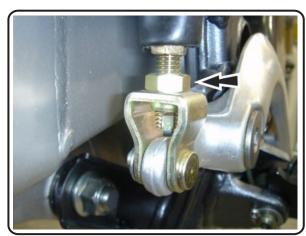


Fig. 2

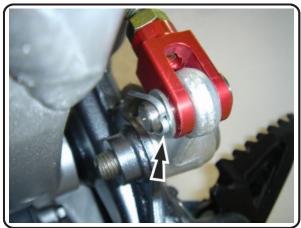


Fig. 3



Fig. 4