

Mounting Instructions

Handlebar riser kit



Honda CBR 600 RR '07-



Fairing Spacer Honda CBR 600 RR '07-

In order to mount the fairing spacer follow these instructions.

1. Loosen up the fairing bolts.
2. Remove according to the service manual the upper fairing, the windscreen and the mirrors.
3. Mount the two black spacer blocks (# 2) on top of the fairing stay (#1) using the included M5x14 bolts and the KA-washer as shown on the picture below. The M5x14 bolt and KA-washer have to be routed from the bottom up through the fairing stay.
4. Next fit the tapered keys (#3) on top of the fairing stay (see picture below) and mount the upper fairing loosely.
5. Assemble the mirrors with the included bolts; use the longer bolts at the top mounting points.
6. Install the windscreen and use the stock screws to tighten it.
7. After reassembly tighten all bolts. We recommend using chemical thread locker.

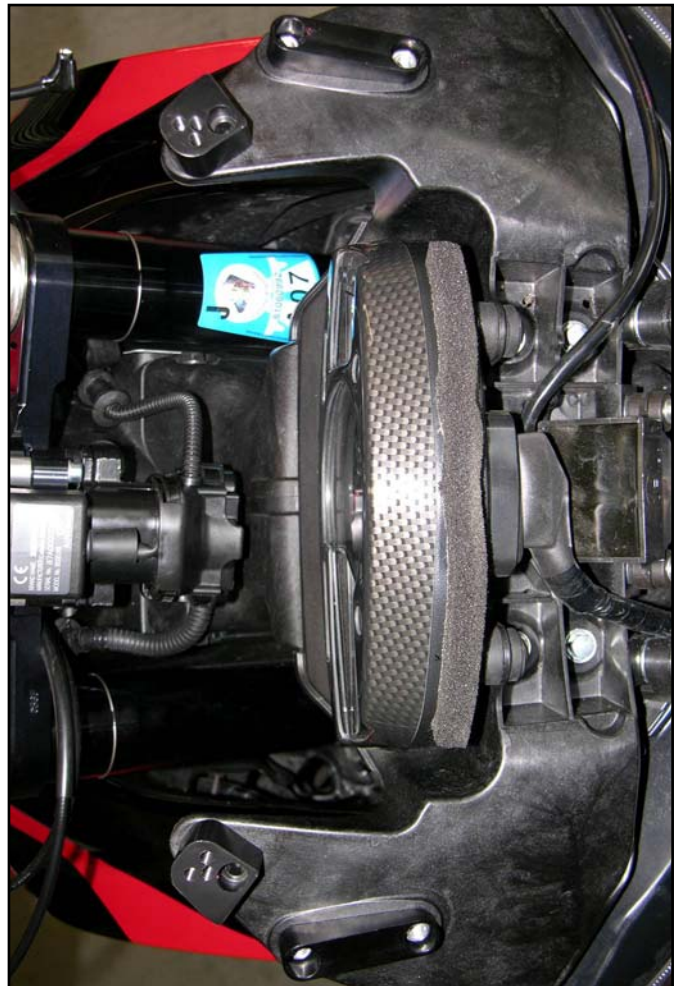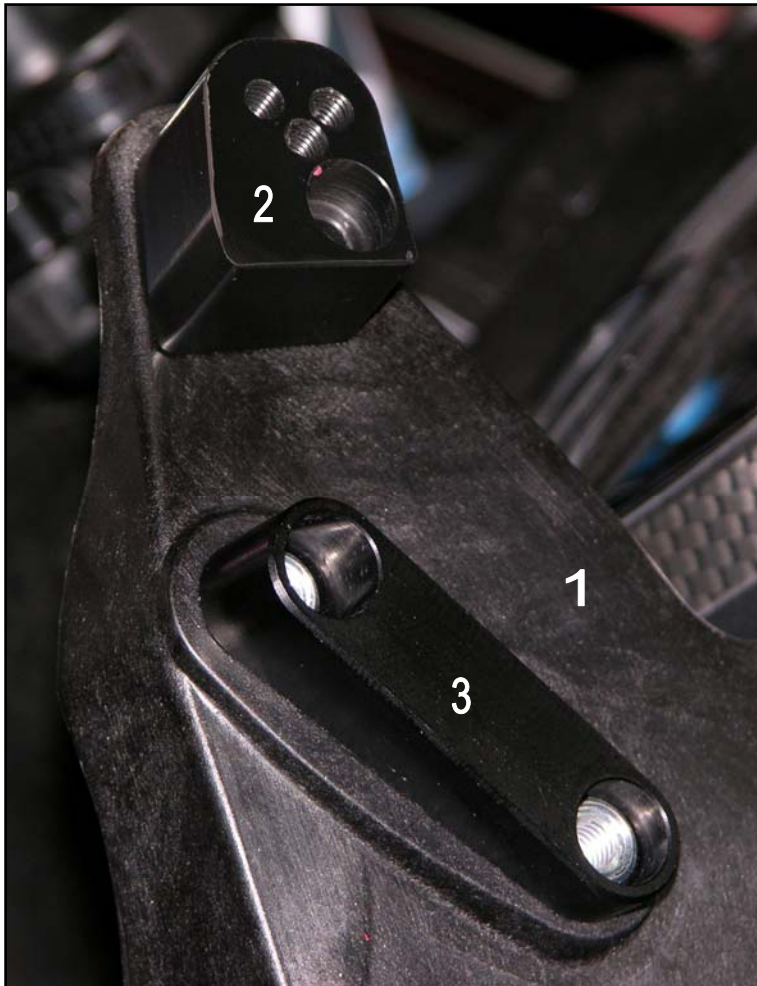

Please call us @ 937-291-1735 if you have any questions.
Your Spiegler Team